

YAMAHA XSR700 '22-

M O U N T I N G I N S T R U C T I O N S

REF 21430

WINDSHIELD NG SPORT



1 Person



 
30 min




EASY



ALLEN



Nº 3
Nº 4
Nº 5

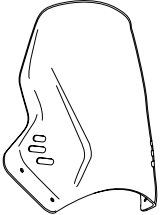
ID.	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Cúpula Sport	Sport screen	1	10935H/W/F/NM3
2		Soporte Izquierdo (L)	Left support (L)	1	SOPOR2P4-L21430
3		Soporte derecho (R)	Right support (R)	1	SOPOR2P4-R21430
4		Tornillo Allen M6x30 Ø11 ISO 7380	M6x30 Ø11 ISO 7380 allen screw	4	TORNI-I7380-626
5		Casquillo Ø8,5 xØ13 x6 mm	Ø8,5 xØ13 x6 mm arrowhead	2	CASQUI-----776
6		Silentblock Ø12xØ6x9	Ø12xØ6x9 silentblock	4	AROPASACABLES-1
7		Casquillo con valona Ø12xØ6,8x7,3	Ø12xØ6,8x7,3 bush with flange	4	CASQUI-1A---750
8		Tornillo allen M5x12 Ø11 ISO 7380	M5x12 Ø11 ISO 7380 allen screw	4	TORNI-AI----520
9		Tapón tornillo M5 ISO 7380	M5 ISO 7380 screw cap	4	TAPON-----85

YAMAHA XSR700 '22-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

**DISASSEMBLY
DESMONTAJE**

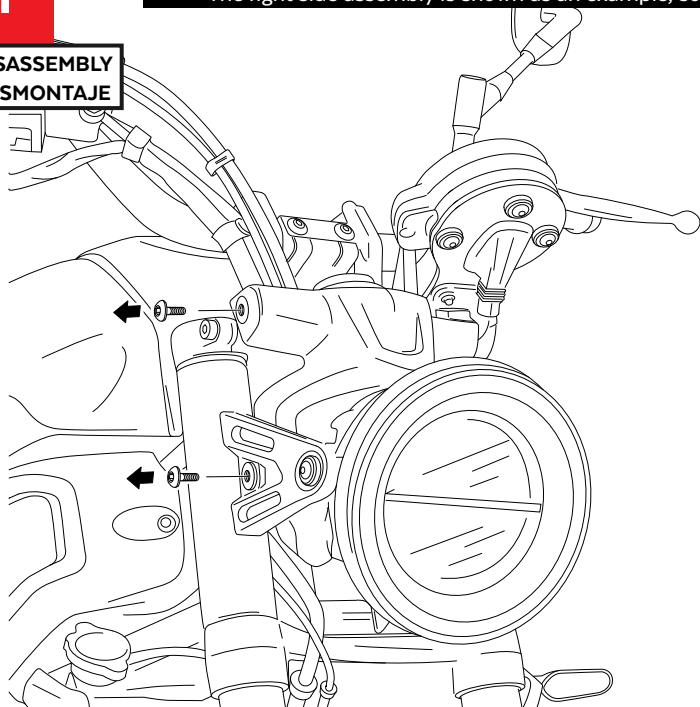


2

**ASSEMBLY
MONTAJE**

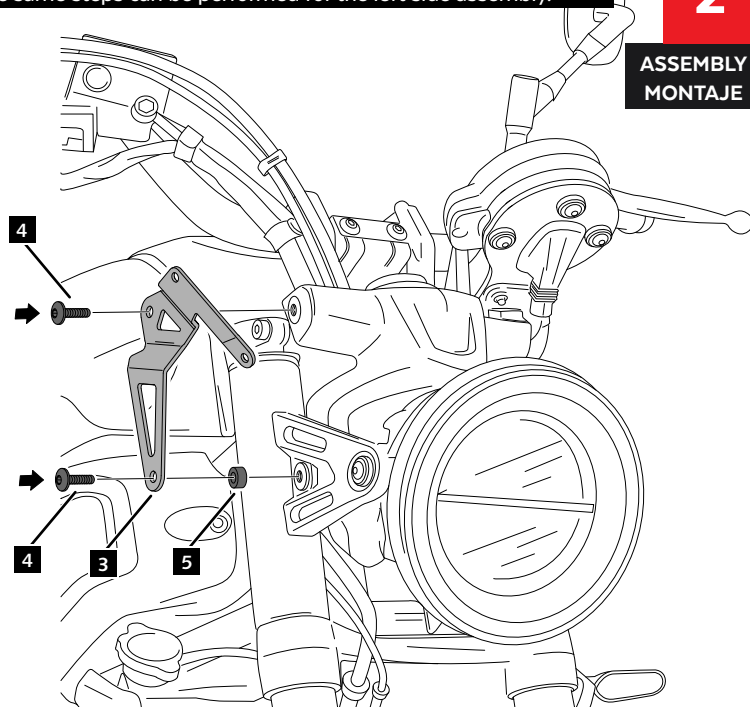

3

**ASSEMBLY
MONTAJE**

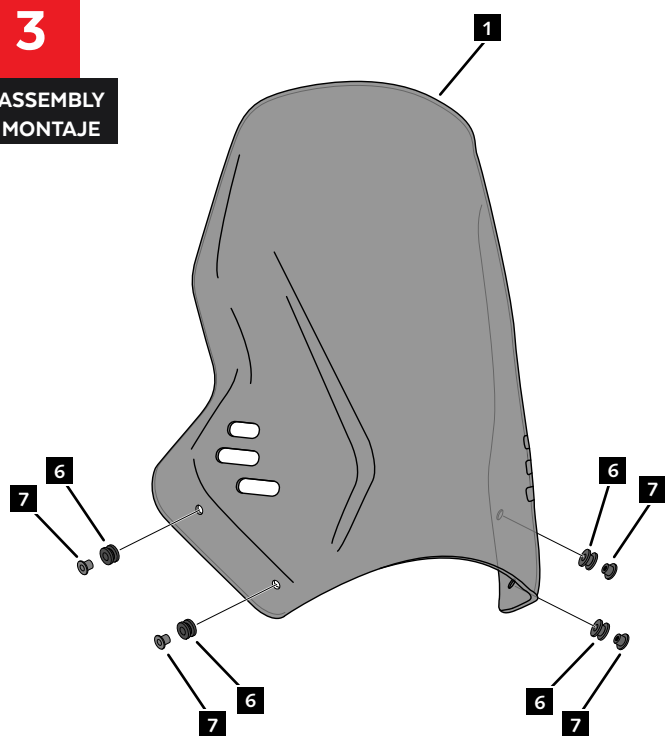

4

**ASSEMBLY
MONTAJE**

