

TRIUMPH ROCKET 3 R '20-

M O U N T I N G I N S T R U C T I O N S

REF 20283

WINDSHIELD NAKED NEW GENERATION TOURING



1 Person



15 min



EASY

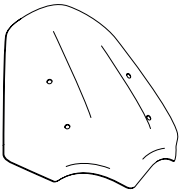




T25

ALLEN



N° 3
N° 4

ID.	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Cúpula Touring	Touring screen	1	20283H/FM3
2		Soporte izquierdo	Left support	1	SOP2PI-L--20283
3		Soporte derecho	Right support	1	SOP2PI-R--20283
4		Tornillo Allen M6x25 Ø14 ISO7380	M6x25 Ø14 ISO7380 allen screw	4	TORNI-I7380-405
5		Casquillo Ø8xØ13x6	Ø8xØ13x6 spacer	4	CASQUI-----776
6		Silentblock Ø9xØ6x8mm	Ø9xØ6x8mm silentblock	4	AROPASACABLES-3
7		Casquillo con valona Ø12xØ6,8x7,3	Ø12xØ6,8x7,3 bush with flange	4	CASQUI-1A---750
8		Tornillo allen M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 allen screw	4	TORNI-I7380-493
9		Tapón tornillo M5 ISO 7380	M5 ISO 7380 screw cap	4	TAPON-----85

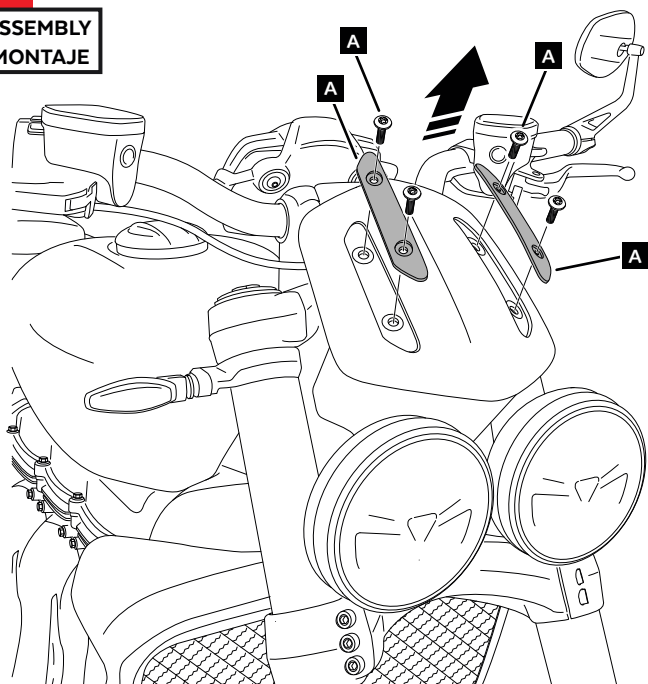
TRIUMPH ROCKET 3 R '20-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

1


DISASSEMBLY
DESMONTAJE

A Componentes originales
Original components



2

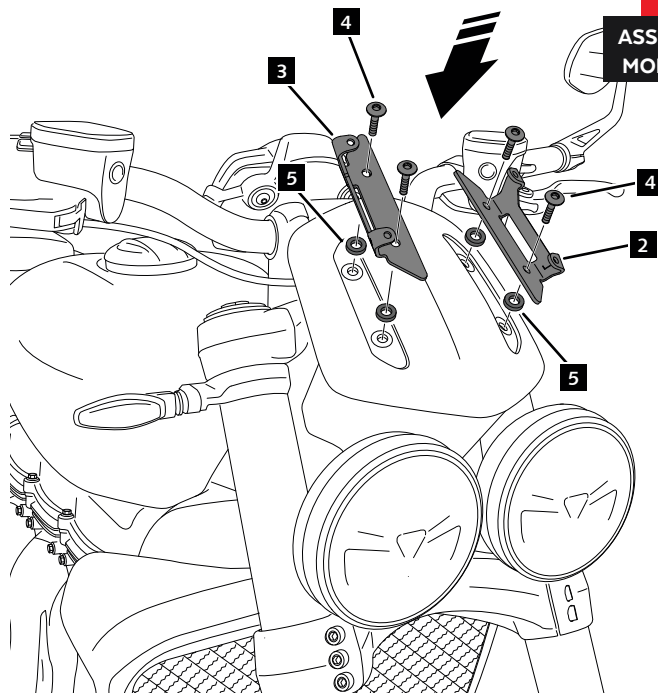ASSEMBLY
MONTAJE



3

ASSEMBLY
MONTAJE

