

HONDA CBR1000RR FIREBLADE / SP '20-

M O U N T I N G I N S T R U C T I O N S

VIDEO

REF 20508

FRONTAL GP SPOILER / ALERON FRONTAL GP



1 Person



15 min



EASY



ALLEN

Nº 3
Nº 5

Nº 8



ID.	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Base alerón (ABS)	Main spoiler (ABS)	1	10850JM3
2		Soporte metálico Izquierdo (L)	Left Metal support (L)	1	SOPOR2P7-L20508
3		Soporte metálico Derecho (R)	Right Metal support (R)	1	SOPOR2P7-R20508
4		Pieza soporte alerón (Tamaño pequeño)	Spoiler support piece (small size)	2	KIT-I-----20431
5		Deflector derecho	Right deflector	1	10851A/N/RM3
6		Deflector izquierdo	Left deflector	1	10851A/N/RM3
7		Tapon tornillo M5 DIN7991	M5 DIN7991 screw cap	8	TAPON-----92
8		Tornillo allen M5x30 Ø11 ISO 7380	M5x30 Ø11 ISO 7380 allen screw	4	TORNI-I7380-767
9		Casquillo Ø13xØ8,5x9mm	Ø13xØ8,5x9mm arrowhead	4	CASQUI-----777
10		Tornillo M5x16 DIN7991 (negro)	M5x16 DIN7991 screw (black)	4	TORNI-D7991-867
11		Tornillo M5x12 DIN7991 (Negro)	M5x12 DIN7991 screw (black)	4	TORNI-D7991-611
12		Tuerca autoblocante M5	M5 lock Nut	4	TUERCA-D982-746
13		Arandela de goma Ø4,5xØ11x2mm	Ø4,5xØ11x2mm rubber washer	8	ARAND-EPDM--722
14		Tope de goma Ø3,7-3,8x3,2mm	Ø3,7-3,8x3,2mm bumper foot	2	TOPE--POF-40022
15		Arandela de nylon M5	M5 nylon washer	4	ARNV0000000245


* Algunos componentes se suministran montados.
Some components are supplied assembled.

HONDA CBR1000RR FIREBLADE / SP '20-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

**DISASSEMBLY
DESMONTAJE**

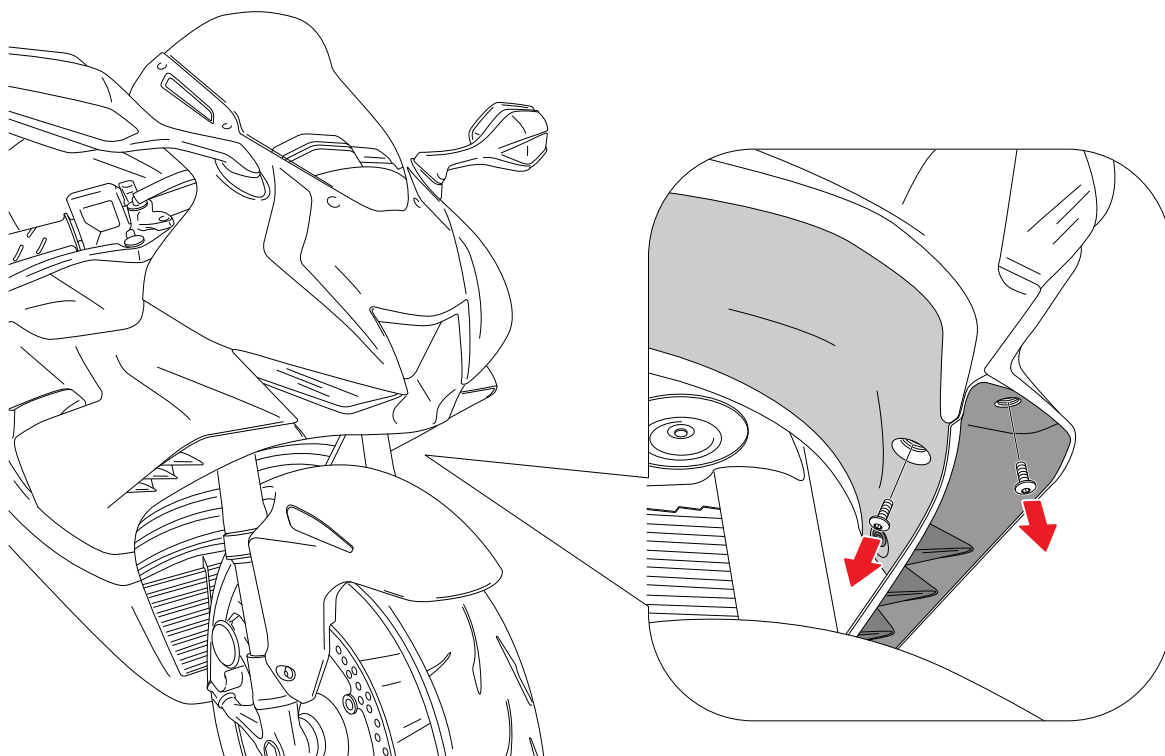

2

**ASSEMBLY
MONTAJE**

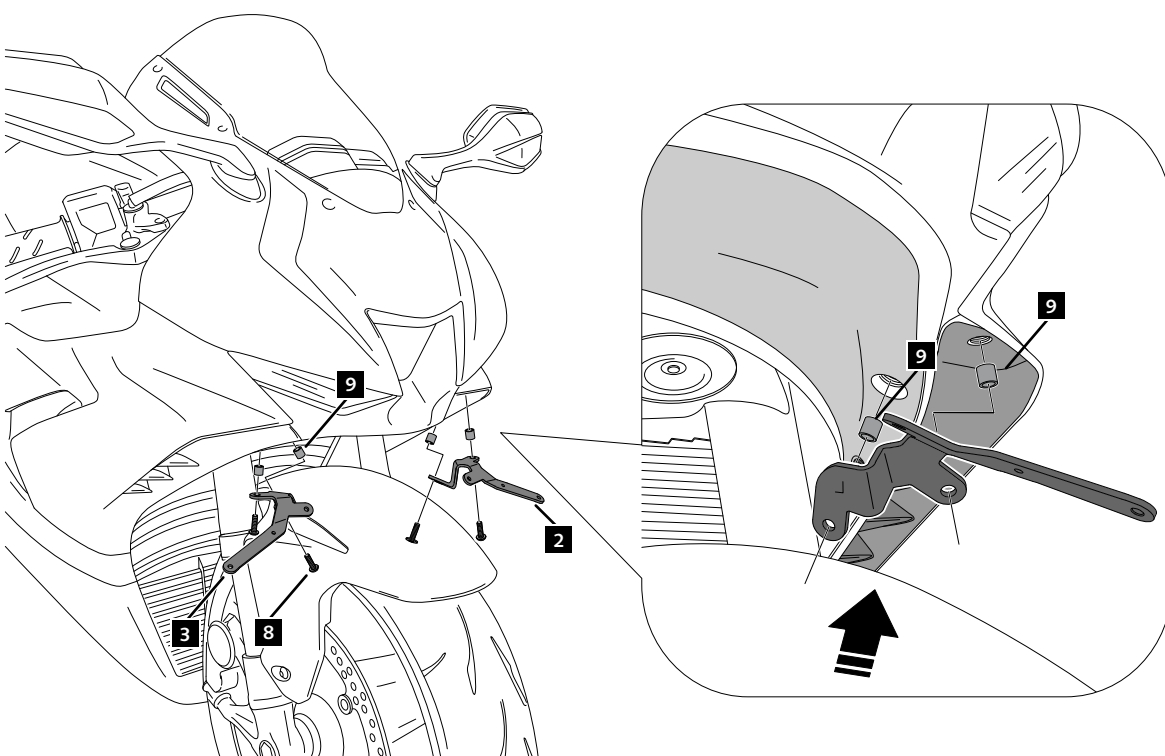


HONDA CBR1000RR FIREBLADE / SP '20-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


3

ASSEMBLY
MONTAJE

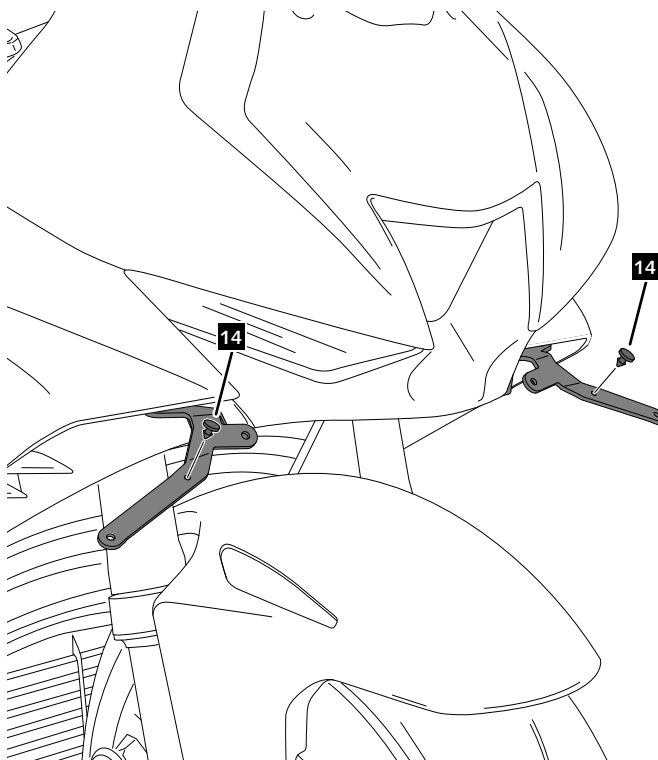

4

ASSEMBLY
MONTAJE

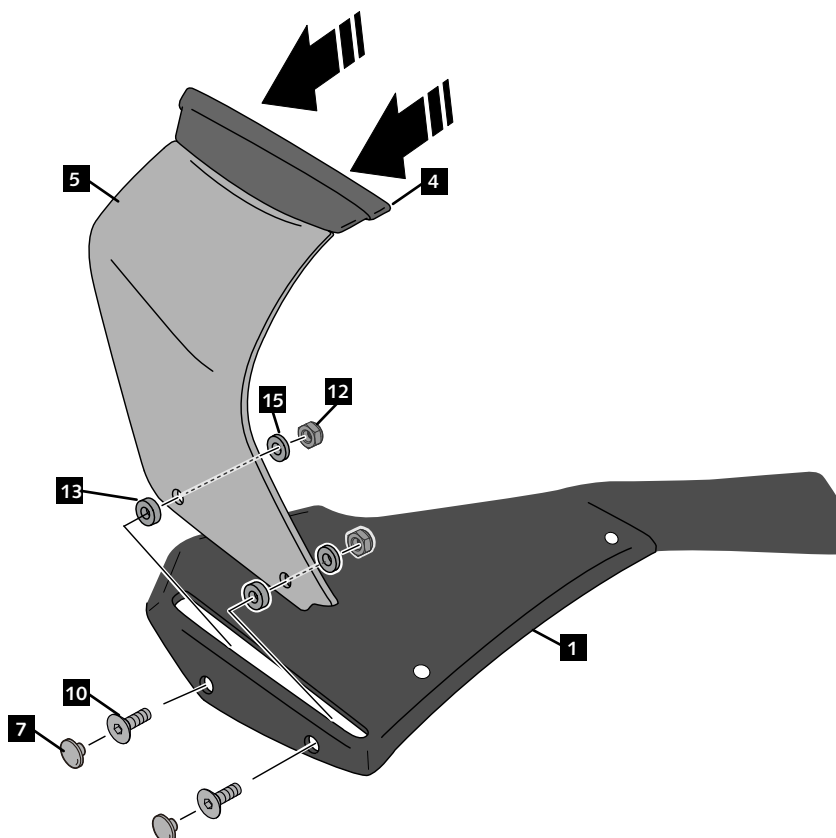


HONDA CBR1000RR FIREBLADE / SP '20-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

5

ASSEMBLY
MONTAJE

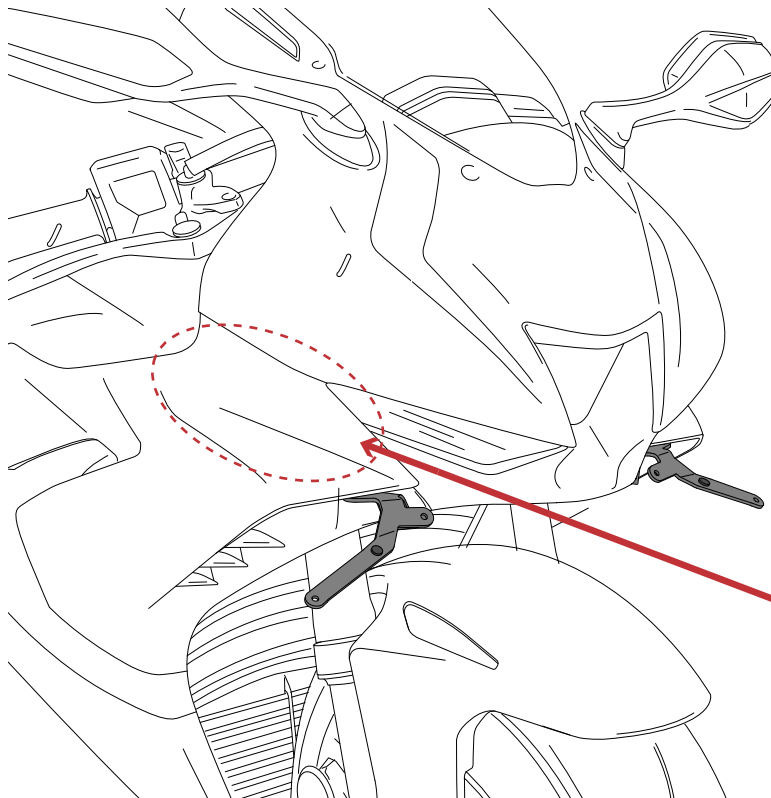


CLEAN THE SURFACE WITH
WATER OR ISOPROPYL ALCOHOL



CHECK IS COMPLETELY DRY
BEFORE START

6

ASSEMBLY
MONTAJE

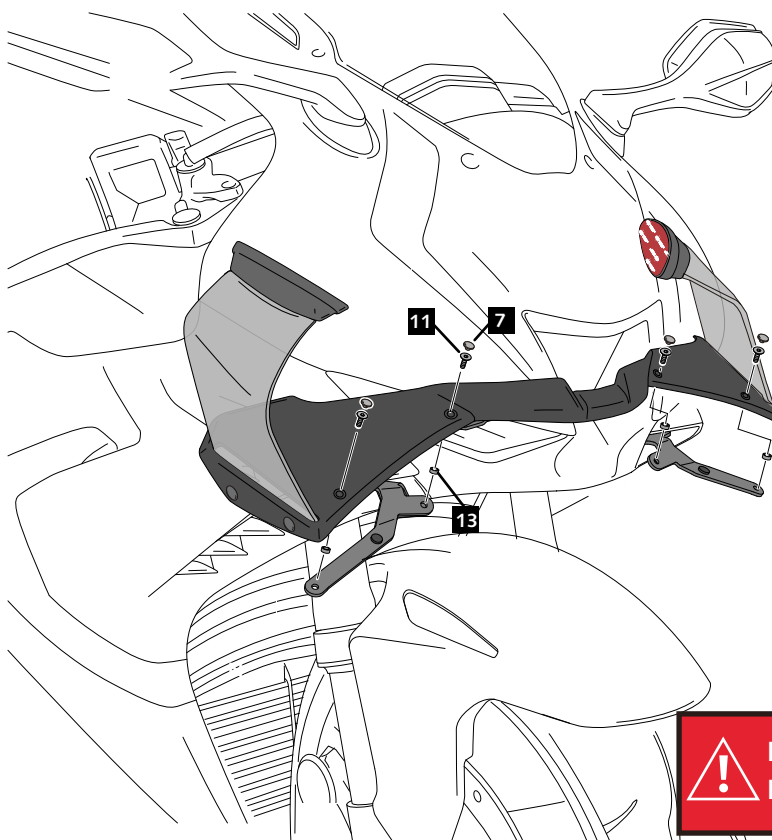

NO APRETAR TORNILLOS ID11
DO NOT TIGHTEN ID10 SCREWS


HONDA CBR1000RR FIREBLADE / SP '20-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG



7

ASSEMBLY
MONTAJE

7.1 DOBLAR LOS EXTREMOS DE LA PIEZA
FOLD THE ENDS OF THE PIECE

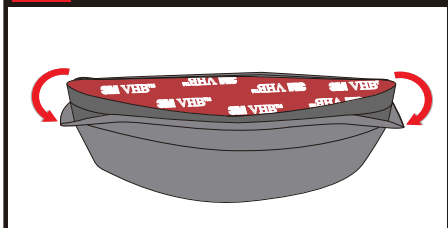

7.2 EXTRAER PAPEL DEL ADHESIVO 3M
REMOVE PAPER FROM 3M ADHESIVE

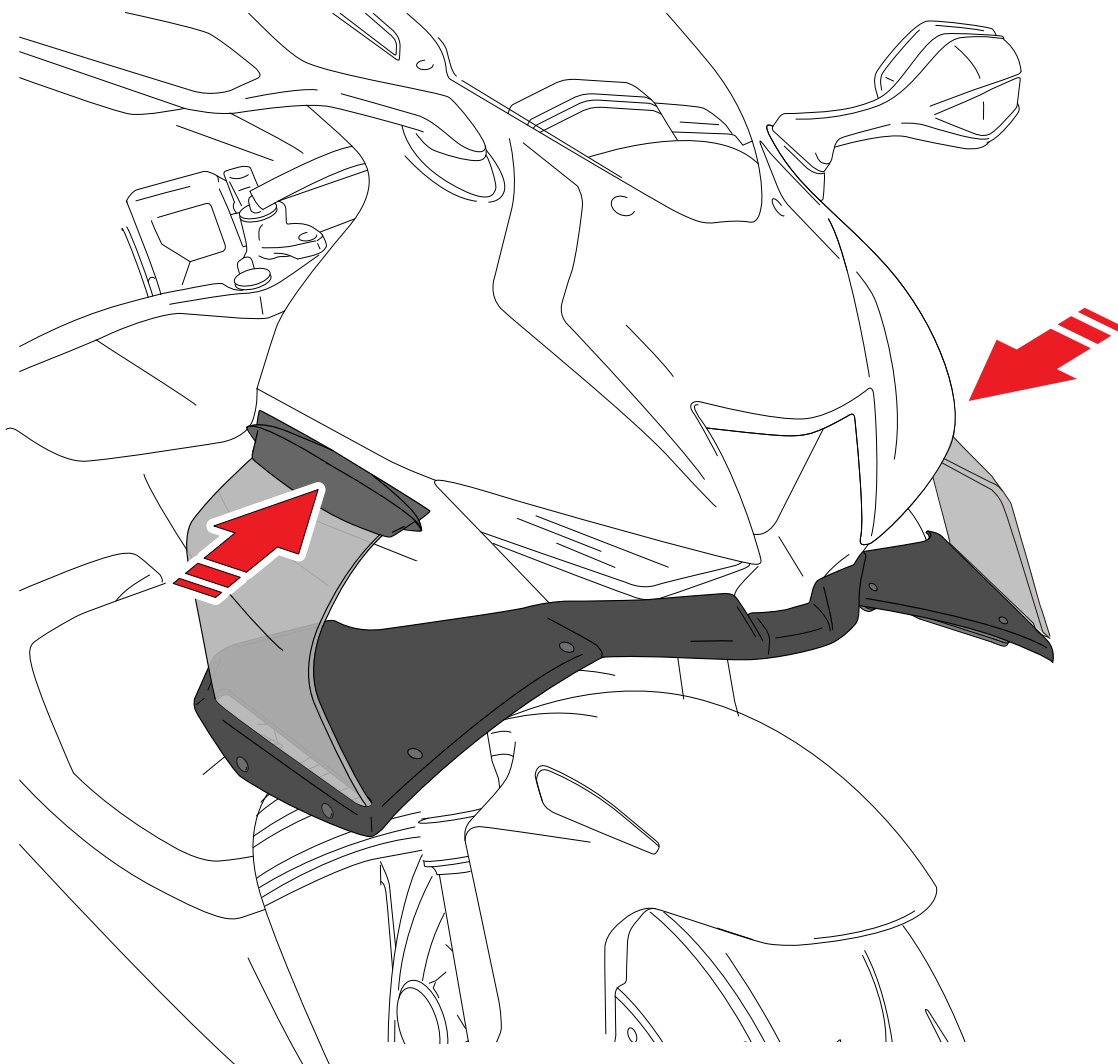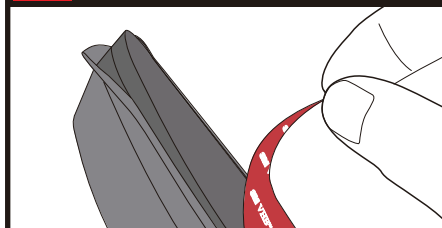

ID.4 APPLY PRESSURE ON ADHESIVE AREA FOR
1 MINUT

HONDA CBR1000RR FIREBLADE / SP '20-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

8

ASSEMBLY
MONTAJE

WAIT 24 HOURS



CHECK THE CORRECT ADHESION
OF THE 3M DOUBLE SIDE
SELF-ADHESIVE TAPE
TO THE FAIRING. ENSURE THAT
THE ENTIRE SURFACE
IS WELL ADHERED

9

ASSEMBLY
MONTAJE

DESDOBLAR LOS EXTREMOS DE LA PIEZA
UNFOLD THE ENDS OF THE PIECE



 **APRETAR TORNILLOS ID11
TIGHTEN ID11 SCREWS**

