

TRIUMPH TRIDENT 660 '21-

M O U N T I N G I N S T R U C T I O N S

REF 20632N

PROTECTOR BASCULANTE PHB19 / PHB19 PROTECTOR SWINGARM



1 Person



15 min



EASY



TUBE






Nº 10

RATCHET



Nº 10

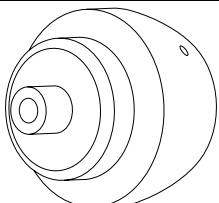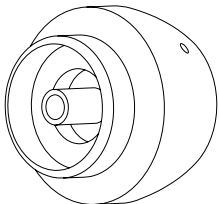ID.	PIEZA / PART	QTY.	REF.:
1		1	PROBAS66-0-0066
2		1	PROBAS65-0-0065
3		1	VARIFO10-1-0010
4		2	TUZBM6000000024
5		2	ARANDEPD125-054
6		2	TAPAFINAL17-18


TRIUMPH TRIDENT 660 '21-

REF 20632N

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

ASSEMBLY
MONTAJE

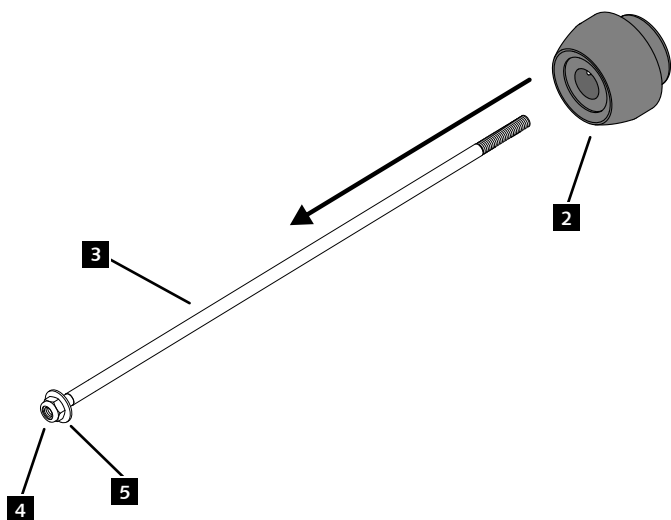


2

ASSEMBLY
MONTAJE

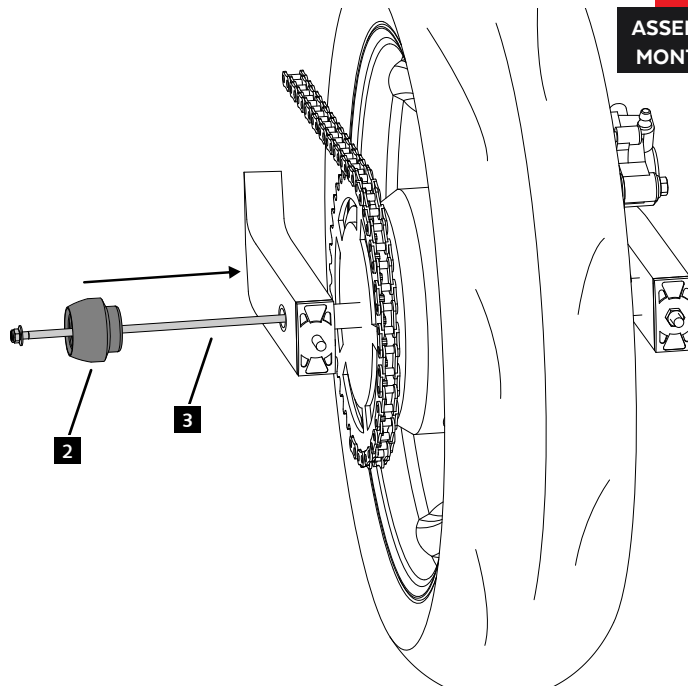


3

ASSEMBLY
MONTAJE

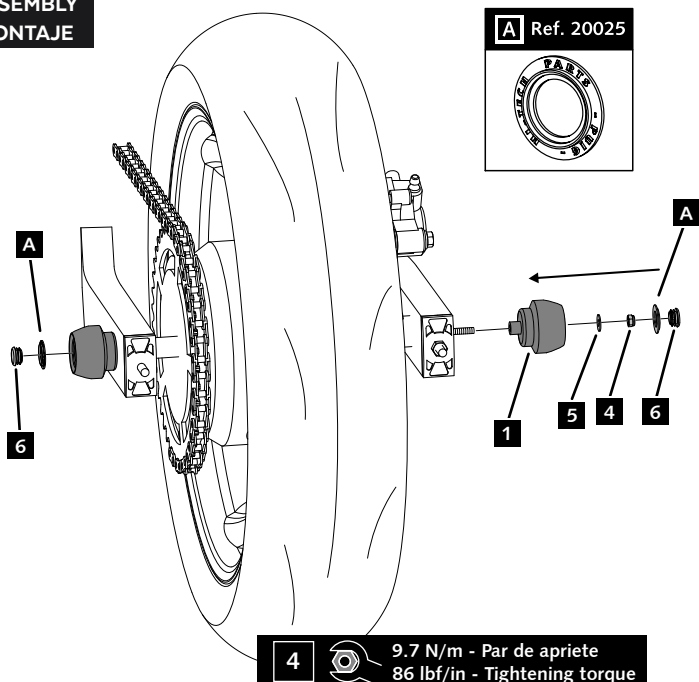

CONSULTAR EN NUESTRA PAGINA WEB LA
DISPONIBILIDAD DEL VIDEO DE MONTAJE DE
ESTA REFERENCIA.
CONSULT OUR WEBSITE THE VIDEO MOUNT
AVAILABILITY OF THIS REFERENCE.

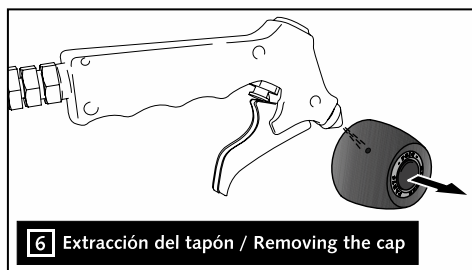

6 Extracción del tapón / Removing the cap