

HONDA PCX 125 '21-

M O U N T I N G I N S T R U C T I O N S

REF 20637

CÚPULA V-TECH TOURING / WINDSHIELD V-TECH TOURING



1 Person



15 min



EASY



PHILLIPS
SCREWDRIVER


Nº 10

ALLEN
Nº 4
Nº 5

ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Cúpula Touring	Touring screen	1	20637F/H/WM3
2		Arandela Nylon Ø8.4x Ø16x 1.6mm	Ø8.4x Ø16x 1.6mm Nylon washer	2	ARAND-----799
3		Arandela metálica M6 DIN125	M6 DIN125 metal washer	2	ARANDEPD125-054
4		Tornillo M6x16 Ø14 ISO7380	M6X16 Ø14 ISO7380 Allen screw	2	TORNI-I7380-403
5		Ribete negro 8x5mm (longitud 37mm)	Black Trim 8x5mm (lenght 37mm)	2	PERFIL-PVC-1048


1

DISASSEMBLY
DESMONTAJE

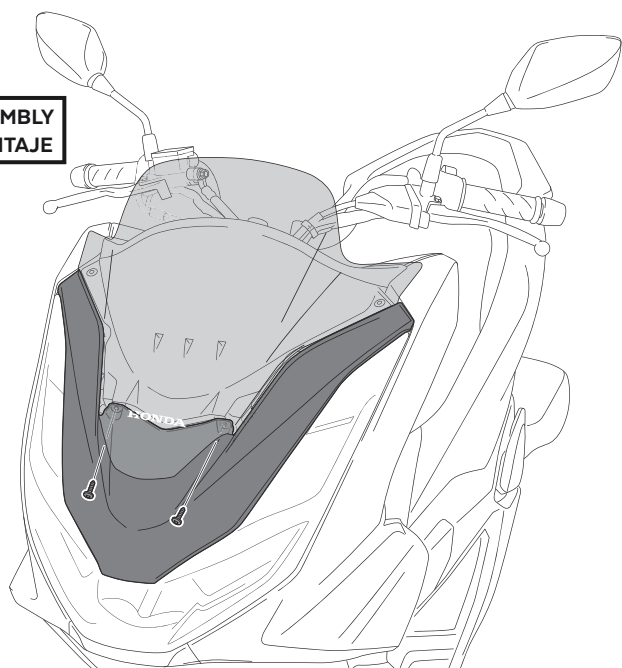

2

DISASSEMBLY
DESMONTAJE

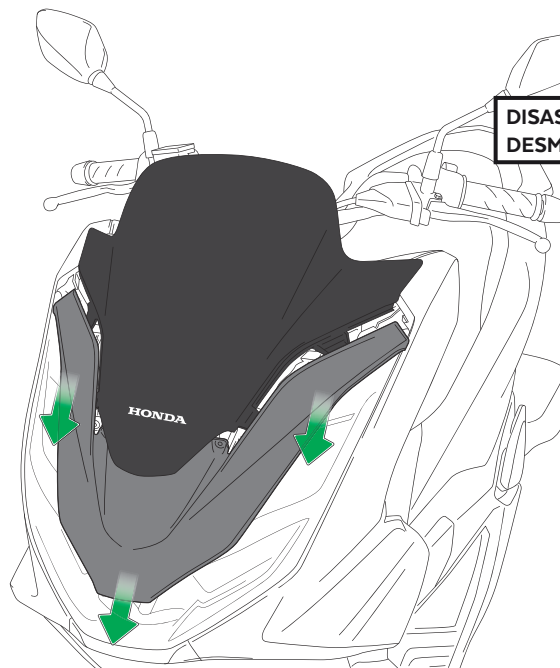


HONDA PCX 125 '21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


3

**DISASSEMBLY
DESMONTAJE**

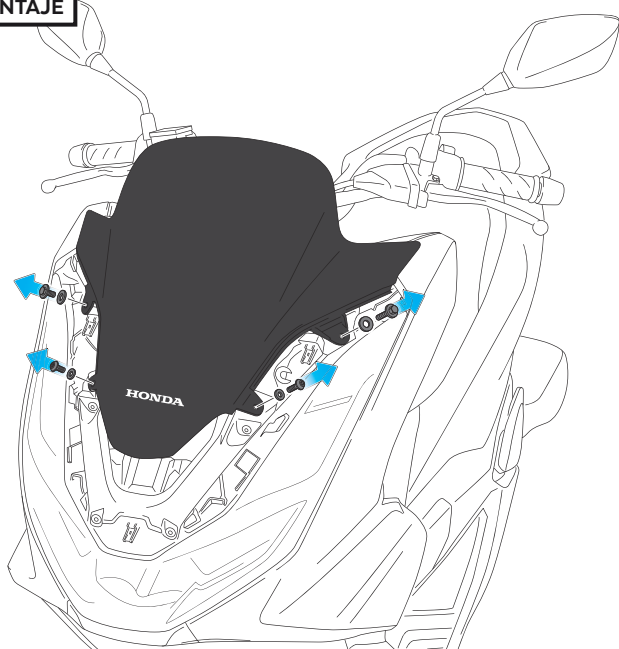


4

**ASSEMBLY
MONTAJE**

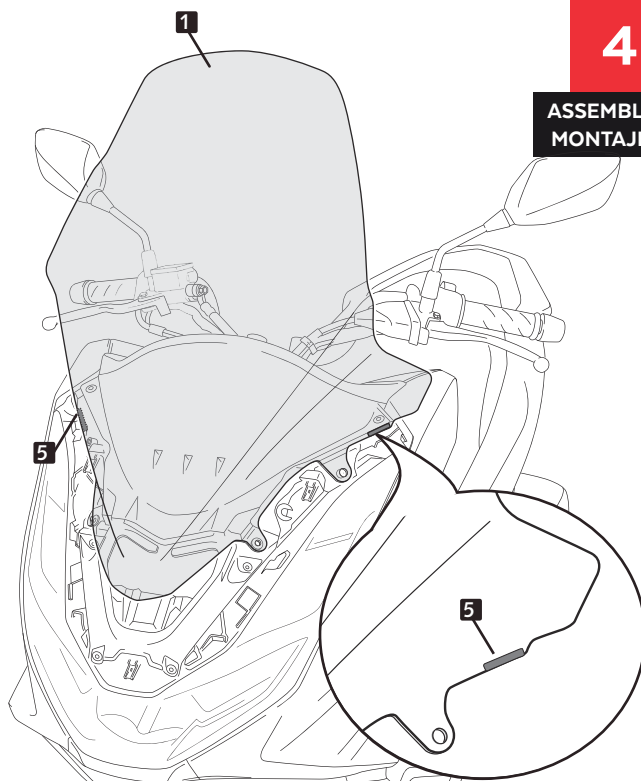

5

**ASSEMBLY
MONTAJE**

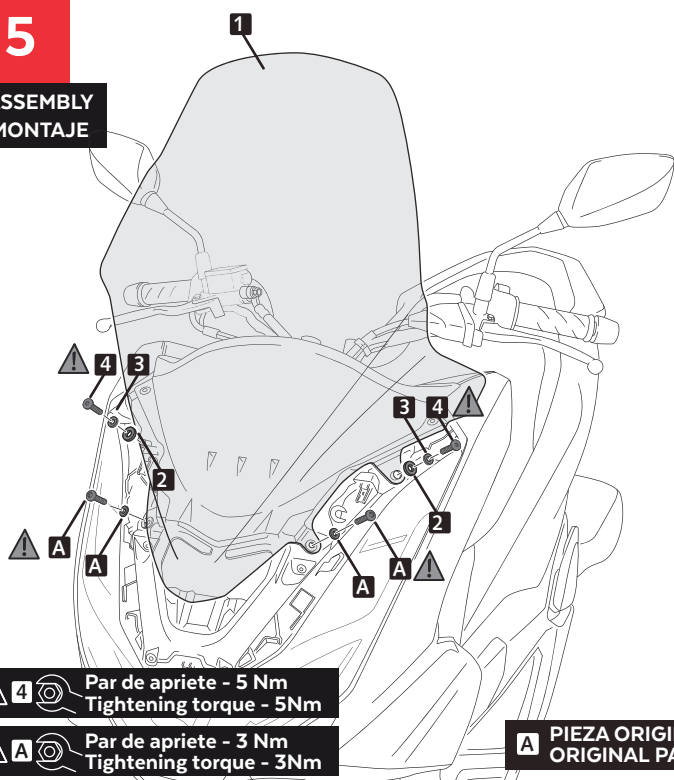

6

**ASSEMBLY
MONTAJE**

