

# KTM 1290 SUPERADVENTURE R/S '21-

## M O U N T I N G I N S T R U C T I O N S

REF 20816

**TOURING PLUS SCREEN**

  
1 Person

  
15 min

  
EASY



ALLEN  
Nº 3




TORX  
T27



FIX  
Nº 11

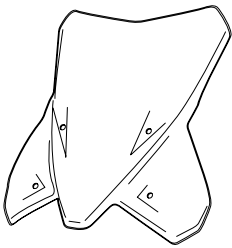

| ID. | PIEZA/PART                                                                          | DESCRIPCIÓN                                                | DESCRIPTION                            | QTY. | REF.:           |
|-----|-------------------------------------------------------------------------------------|------------------------------------------------------------|----------------------------------------|------|-----------------|
| 1   |  | Cúpula TOURING PLUS                                        | TOURING PLUS screen                    | 1    | 20816W/H/FM3    |
| 2   |  | Tornillo especial M5x8 Long Hexagonal 25 (Rosca int M5x20) | M5x8 special screw hexagonal Lenght 25 | 2    | TORNI-EM5---732 |
| 3   |  | Tornillo especial M5x8 Long Hexagonal 14 (Rosca int M5x13) | M5x8 special screw hexagonal Lenght 14 | 2    | TORNI-EC----597 |
| 4   |  | Silentblock Ø9 xØ6 x8mm                                    | Ø12xØ6x9 Silentblock                   | 4    | AROPASACABLES-3 |
| 5   |  | Casquillo con valona Ø12xØ6,8x7,3                          | Ø12xØ6,8x7,3 bush with flange          | 4    | CASQUI-1A---750 |
| 6   |  | Tornillo allen M5x16 Ø11 ISO 7380                          | M5x16 Ø11 ISO 7380 allen Screw         | 4    | TORNI-I7380-493 |
| 7   |  | Tapón tornillo M5 ISO 7380                                 | M5 ISO7380 screw cap                   | 4    | TAPON-----85    |

\* Algunos de los Componentes se suministran montados  
Some components are supplied assembled


# KTM 1290 SUPERADVENTURE R/S '21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

**1**


**DISASSEMBLY  
DESMONTAJE**

**A** Tornillería original  
Original screws

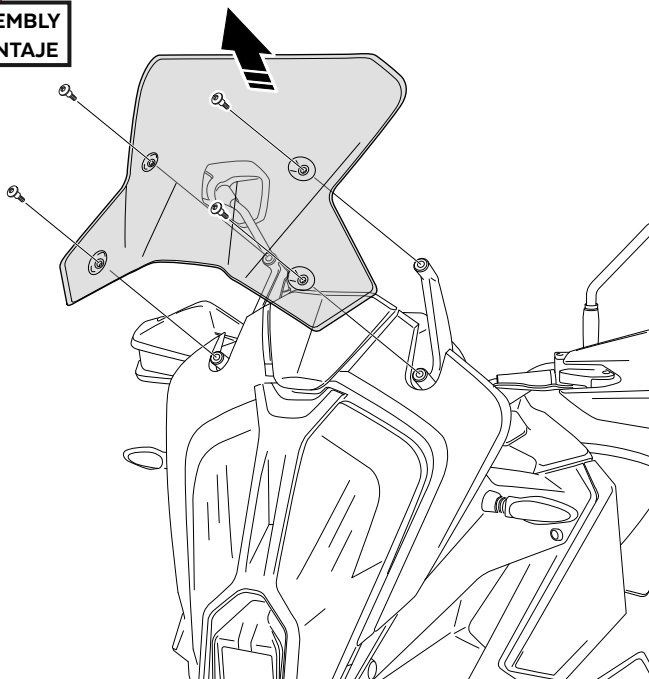


**3**

**ASSEMBLY  
MONTAJE**

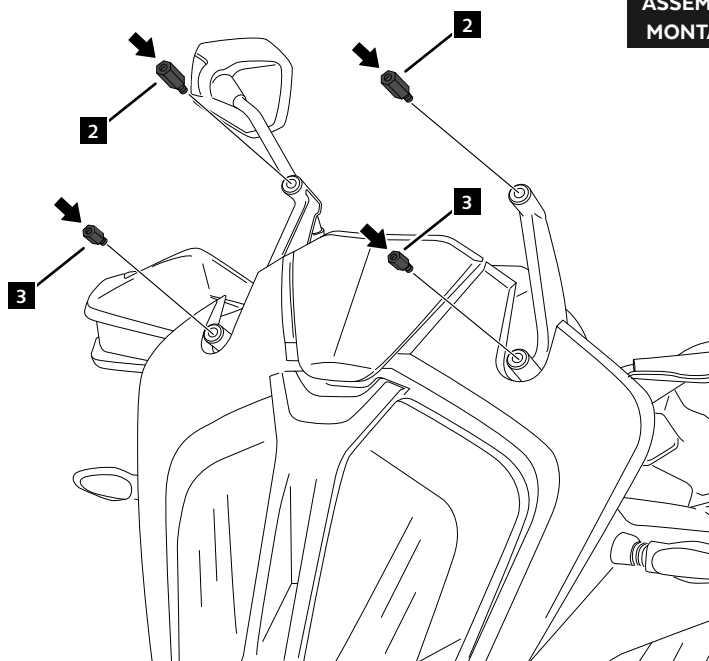


**2**

**ASSEMBLY  
MONTAJE**

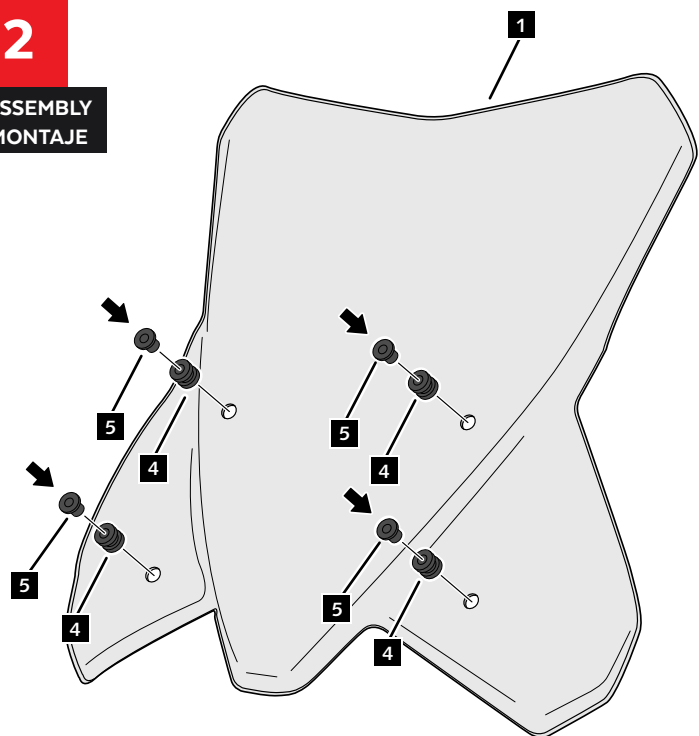

**4**

**ASSEMBLY  
MONTAJE**

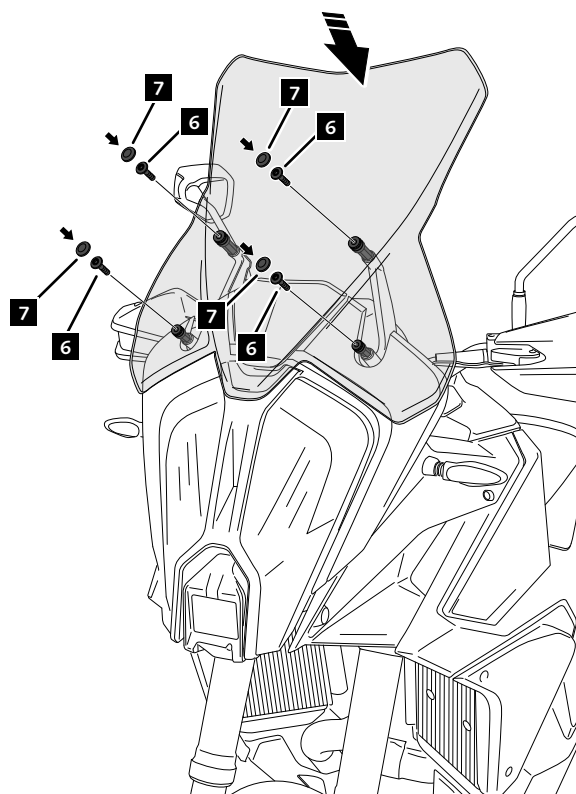

# VISERA MULTIREGULABLE MULTI-ADJUSTABLE VISOR

CÚPULA TIPO  
TYPE WINDSCREEN **A**



CÚPULA TIPO  
TYPE WINDSCREEN **B**



CÚPULA TIPO  
TYPE WINDSCREEN **C**



Ref.: 6007



Ref.: 5852





Ref.: 5853



Ahumado/Smoke



Transparente/Clear

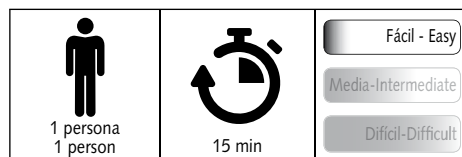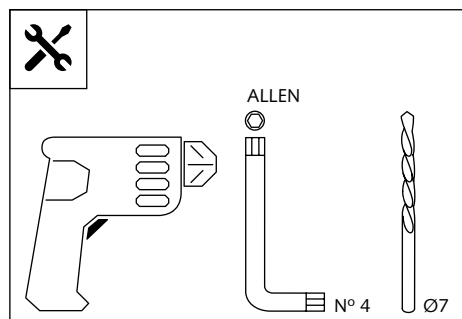

**Nota/Note:**





Si la visera se suministra con la cúpula Puig, no será necesario realizar los agujeros por que ya vienen incorporados.  
If the visor is supplied along with the windscreen, the windscreen will come factory-drilled so no drilling is necessary.

| ID. | PIEZA / PART | DESCRIPCIÓN                   | DESCRIPTION                   | QTY. |
|-----|--------------|-------------------------------|-------------------------------|------|
| 1   |              | Visera                        | Visor                         | 1    |
| 2   |              | Plantilla                     | Template                      | 1    |
| 3   |              | Mecanismo multiregulable      | Multi-adjustable mechanism    | 2    |
| 4   |              | Tapeta                        | Cap                           | 4    |
| 5   |              | Tornillo rosca plástico M6x12 | Plastic thread fastener M6x12 | 8    |

# VISERA MULTIREGULABLE MULTI-ADJUSTABLE VISOR

## INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG





### TIPO/TYPO A - TIPO/TYPO A - TIPO/TYPO A

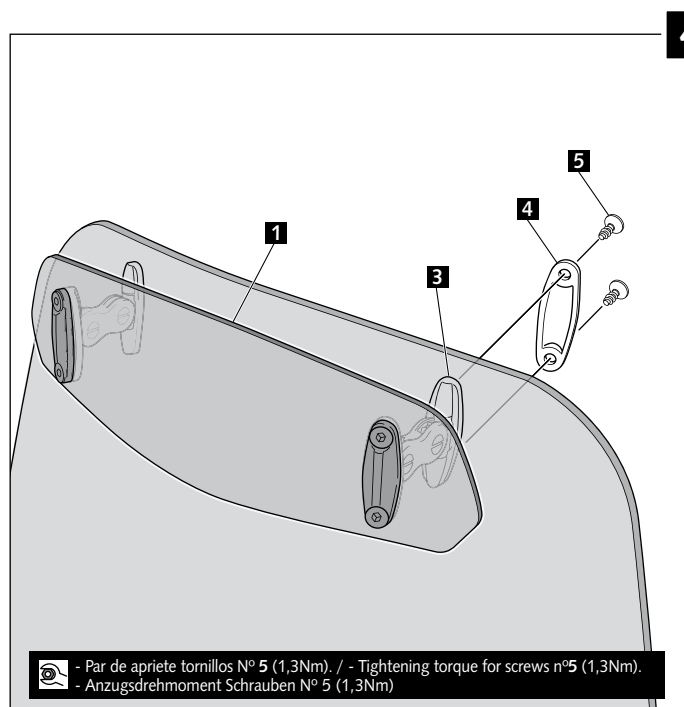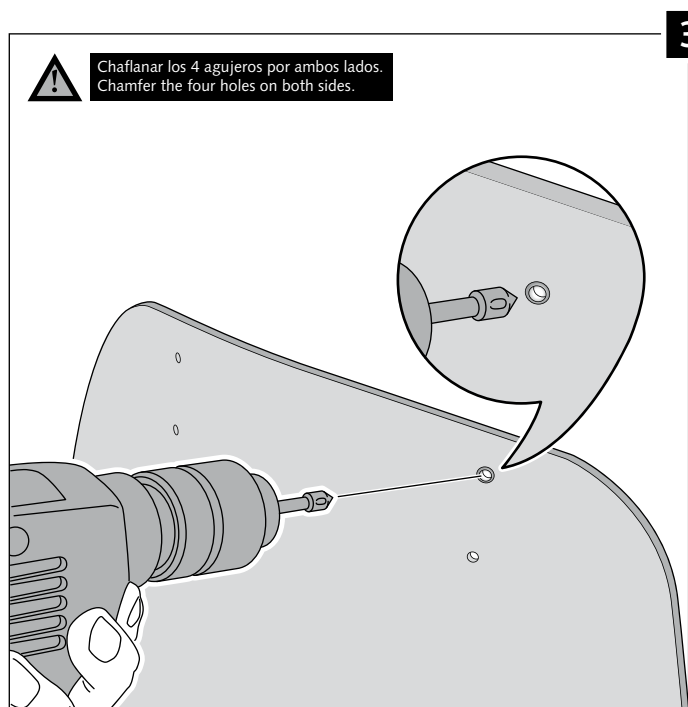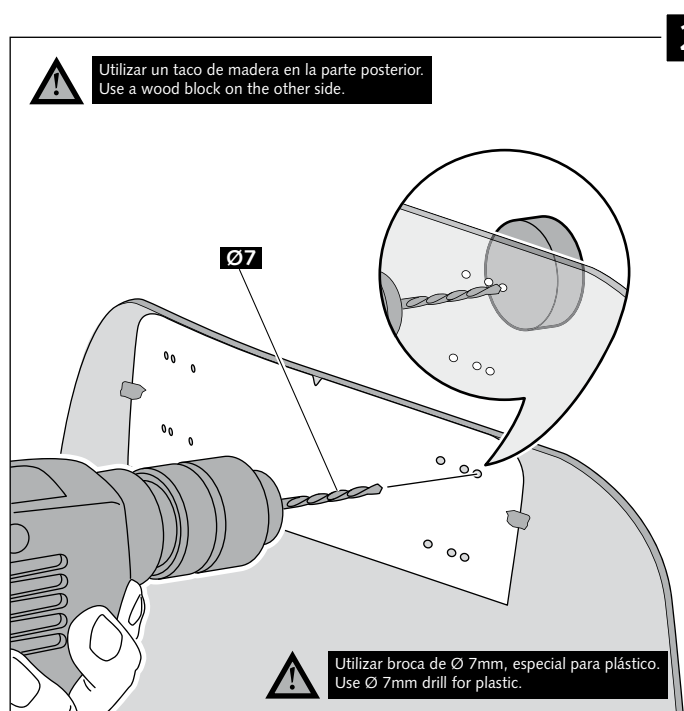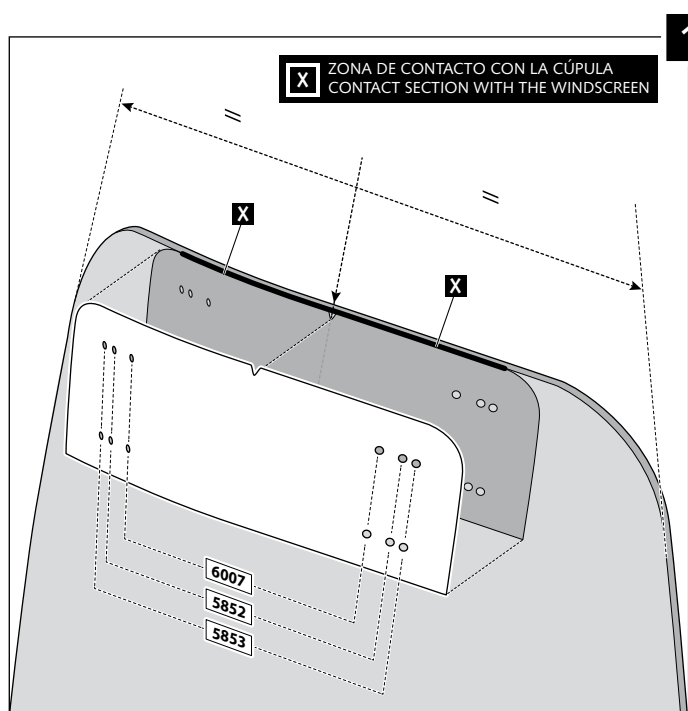

# VISERA MULTIREGULABLE MULTI-ADJUSTABLE VISOR

## INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

### TIPO/TYPE B - TIPO/TYPE B - TIPO/TYPE B

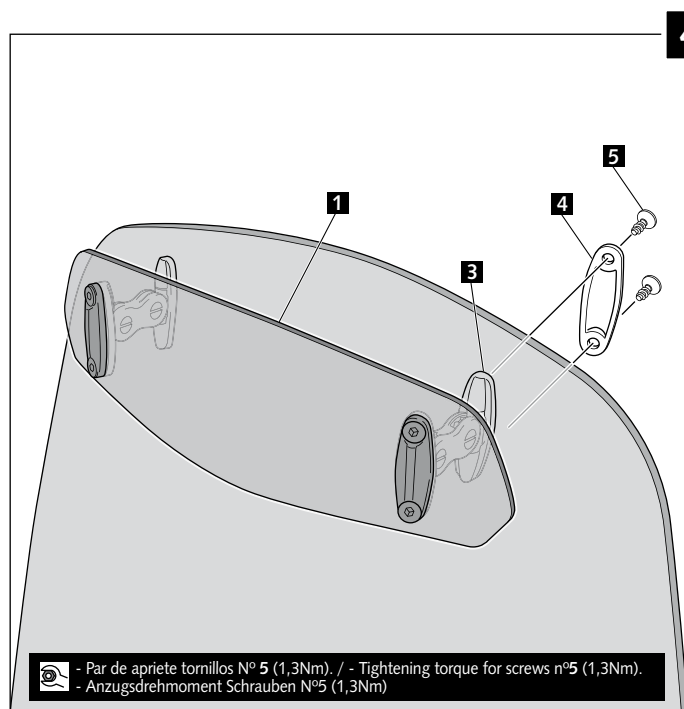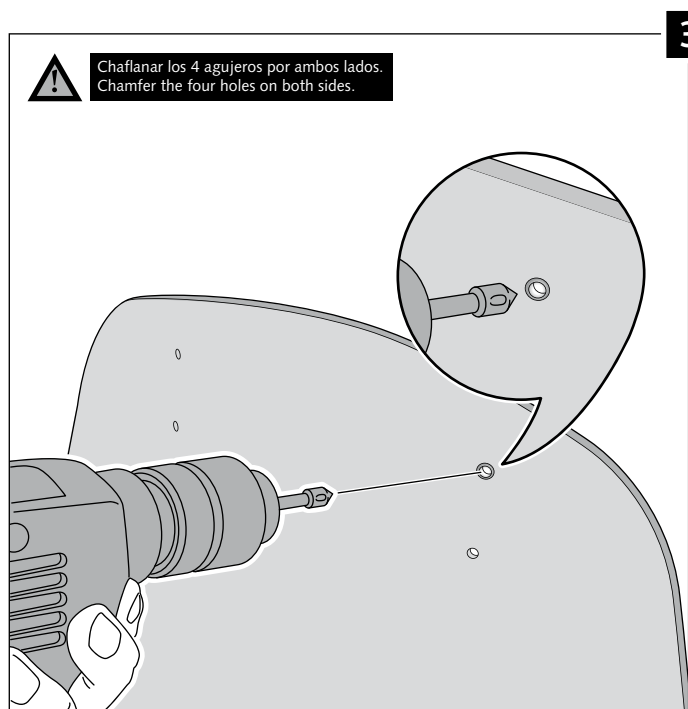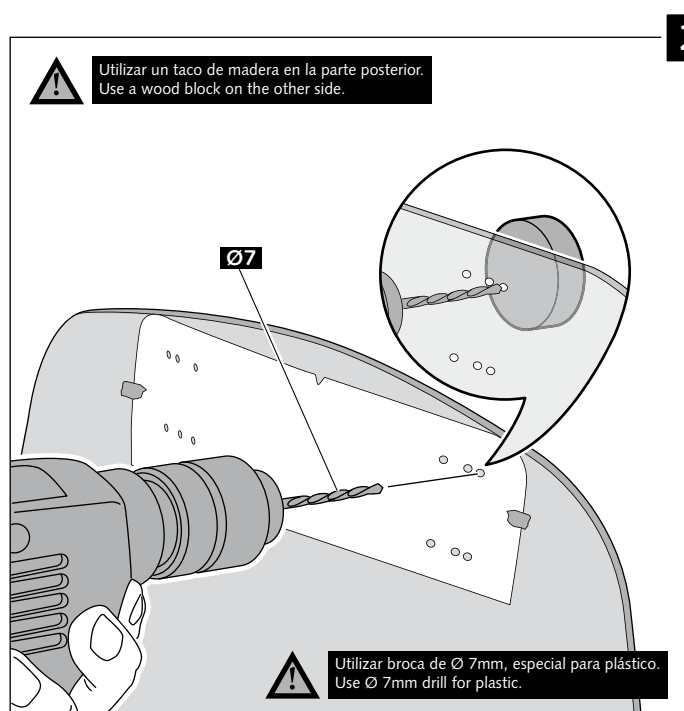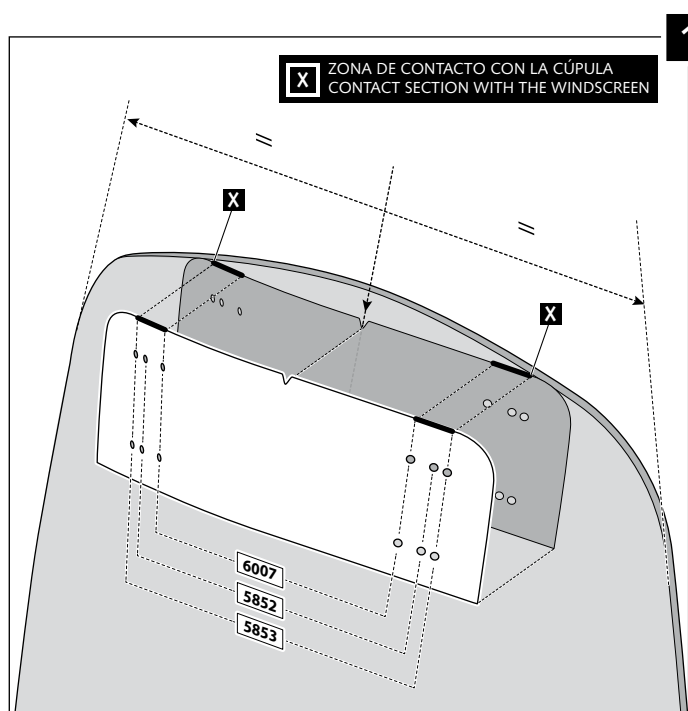

# VISERA MULTIREGULABLE MULTI-ADJUSTABLE VISOR

## INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

### TIPO/TYPE C - TIPO/TYPE C - TIPO/TYPE C

