

BMW S1000R '21-

M O U N T I N G I N S T R U C T I O N S

REF 20886

CARENABRÍS NG SPORT / WINDSHIELD NG SPORT



1 Person



20 min



EASY





TORX
T25



ALLEN
Nº 3

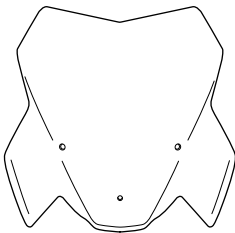


ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Cúpula Sport	Sport screen	1	10852W/H/N/F/AM3
2		Soporte metálico	Metal suport	1	SOP1P7- C--20886
3		Silentblock Ø12xØ6x9	Ø12xØ6x9 Silentblock	3	AROPASACABLES-3
4		Casquillo con valona Ø12xØ6,8x7,3	Ø12xØ6,8x7,3 Bush with flange	3	CASQUI-1A---750
5		Tornillo Allen M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 Allen screw	6	TORNI-I7380-493
6		Tapón tornillo M5 ISO 7380	M5 ISO 7380 screw cap	3	TAPON-----85

BMW S1000R '21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

**DISASSEMBLY
DESMONTAJE**

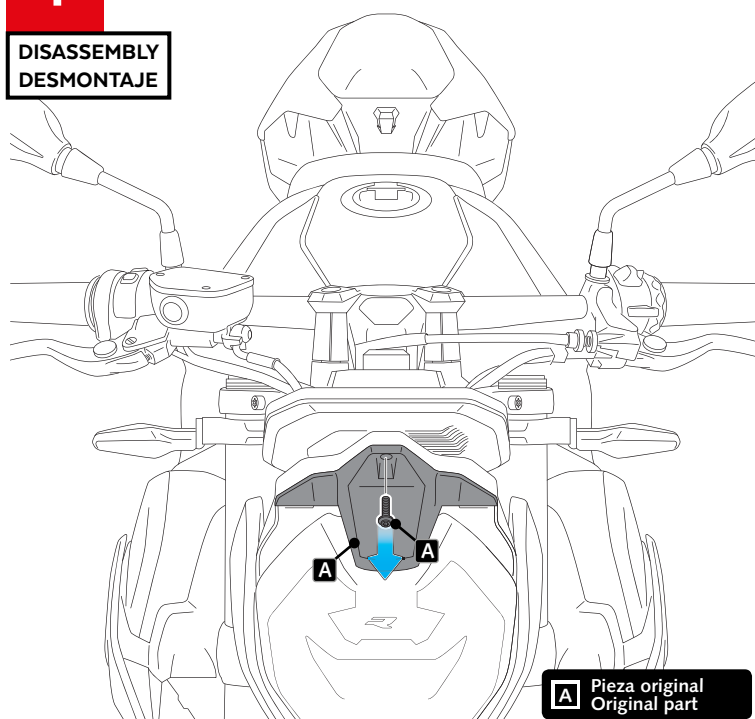



2

**ASSEMBLY
MONTAJE**

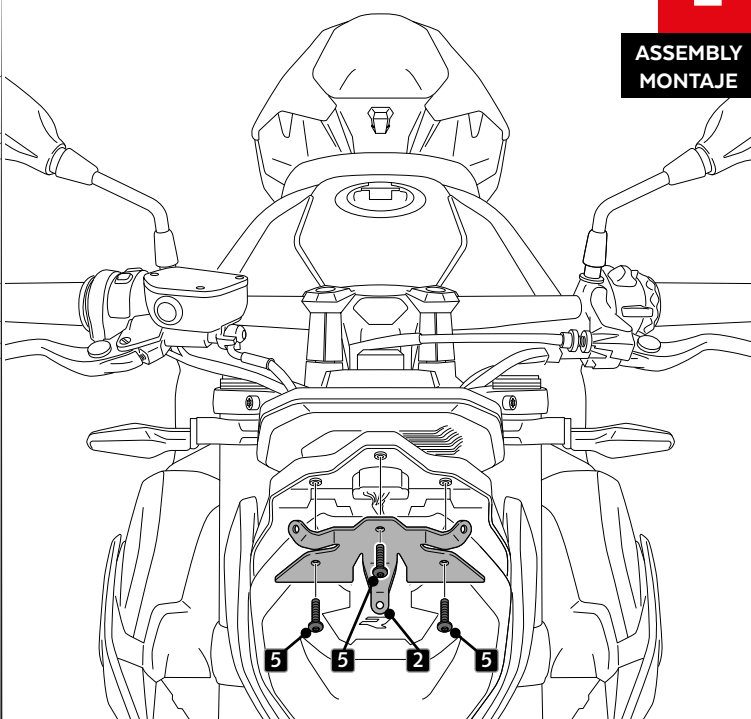

3

**ASSEMBLY
MONTAJE**

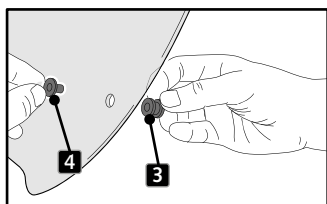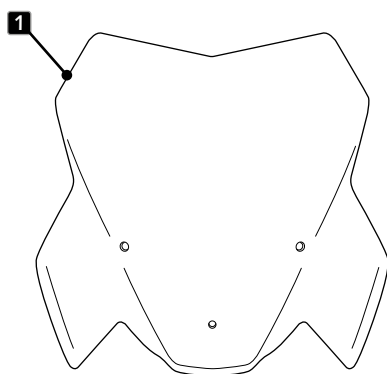

4

**ASSEMBLY
MONTAJE**

