


BMW S 1000R '09-'16 BMW S 1000RR '09-'16

REF 21501N

TAPAS LATERAL IZQUIERDO / LEFT SIDE COVERS

ATENCION: Tapas con avisador de desgaste homologadas por la Federación Internacional de Motociclismo (FIM). Aptas para uso en competición.
ATTENTION: Covers with a wear warning device approved by the International Motorcycling Federation (FIM). Suitable for use in competition.
ATTENTION: Protections Carters avec temoins d'usure Homologues par la FIM (Federation Internationale de Motocyclisme). Convienent pour un usage en competition.
ACHTUNG: Abdeckungen mit einer von der International Motorcycling Federation (FIM) zugelassenen Verschleißwarnvorrichtung. Geeignet für den Einsatz im Wettkampf.

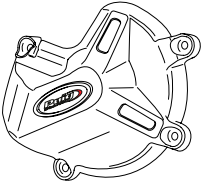

ID.	PIEZA / PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Tapa izquierda	Left cover	1	CONJUNTO--20168
2		Tornillo Torx M6x40 ISO10664	ISO10664 M6x40 torx screw	4	-

RECOMENDAMOS MONTAR LOS TORNILLOS APRETANDO UNIFORMEMENTE UNO TRAS OTRO, PARA APRETAR FINALMENTE CON DINAMOMÉTRICA
WE RECOMMEND TO MOUNT THE SCREWS UNIFORMLY TIGHTENING ONE AFTER THE OTHER, TO FINALLY TIGHTEN WITH DYNAMOMETRIC

**CONSULTAR EN NUESTRA PAGINA WEB LA DISPONIBILIDAD DEL VIDEO DE MONTAJE DE ESTA REFERENCIA.
CONSULT OUR WEBSITE THE VIDEO MOUNT AVAILABILITY OF THIS REFERENCE.**



BMW S 1000R '09-'16
BMW S 1000RR '09-'16

REF 21501N

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

1


ASSEMBLY
MONTAJE

2  3,00 N/m + ángulo giro 90° - Par de apriete
2,21 lbf/ft + turning angle 90° - Tightening torque

ALLEN



5mm

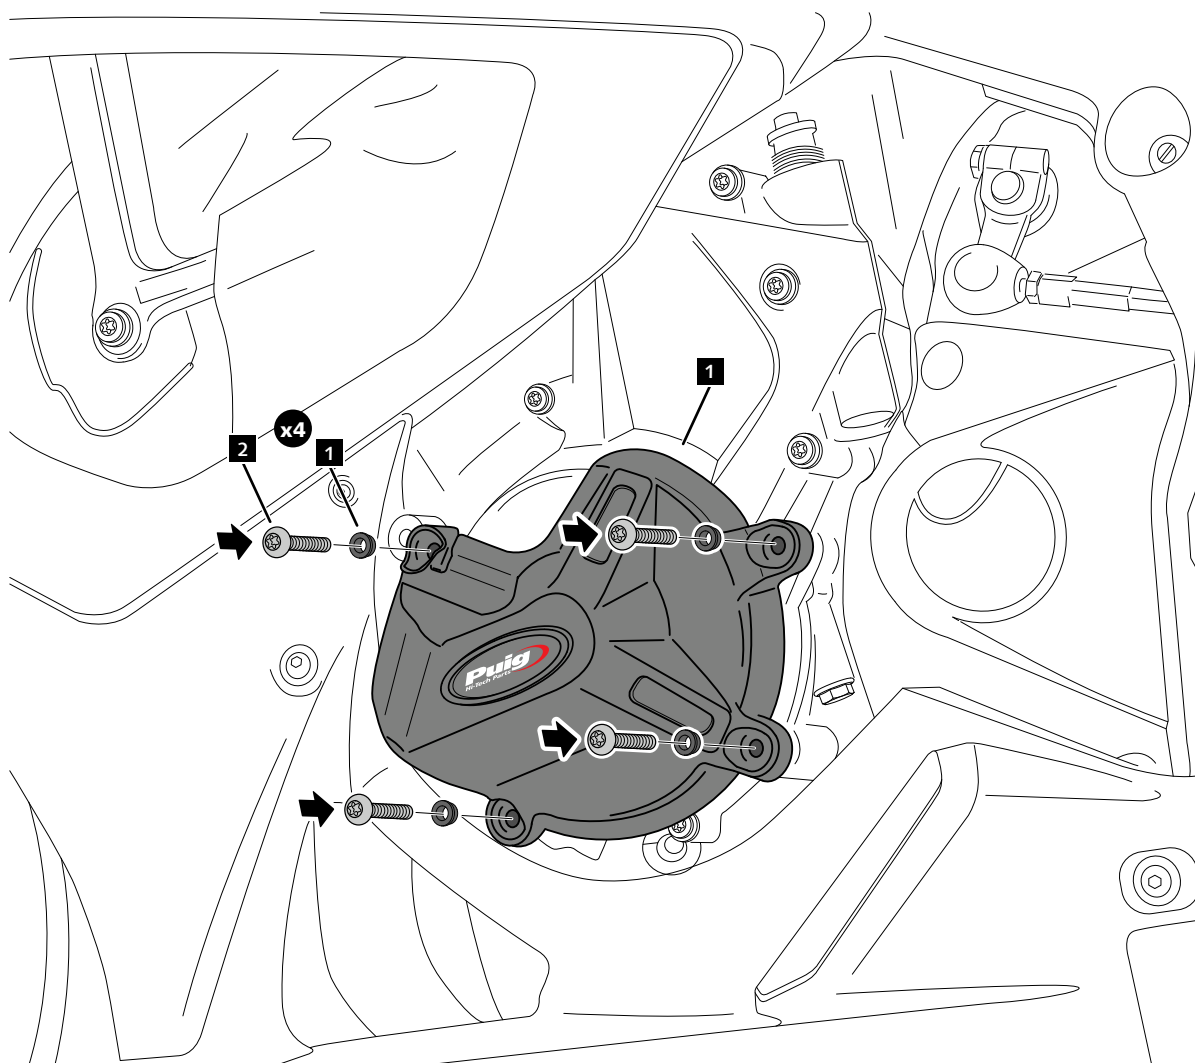

BMW S 1000R '09-'16
BMW S 1000RR '09-'16

REF 21501N

TAPAS LATERAL DERECHO / RIGHT SIDE COVERS



1 Person







30 min



EASY

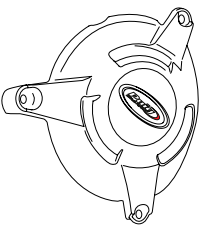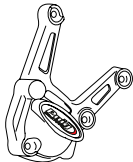

ID.	PIEZA / PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Tapa derecha 1	Right cover 1	1	CONJUNTO--20168
2		Tapa derecha 2	Right cover 2	1	CONJUNTO--20168
3		Tornillo Torx M6x30 ISO10664	ISO10664 M6x30 torx screw	4	-
4		Tornillo Torx M6x40 ISO10664	ISO10664 M6x40 torx screw	3	-

RECOMENDAMOS MONTAR LOS TORNILLOS APRETANDO UNIFORMEMENTE UNO TRAS OTRO, PARA APRETAR FINALMENTE CON DINAMOMÉTRICA
WE RECOMMEND TO MOUNT THE SCREWS UNIFORMLY TIGHTENING ONE AFTER THE OTHER, TO FINALLY TIGHTEN WITH DYNAMOMETRIC

BMW S 1000R '09-'16 BMW S 1000RR '09-'16


REF 21501N

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

1

DESMTAR EL CARENADO /
REMOVE THE COVER

DISASSEMBLY
DESMONTAJE

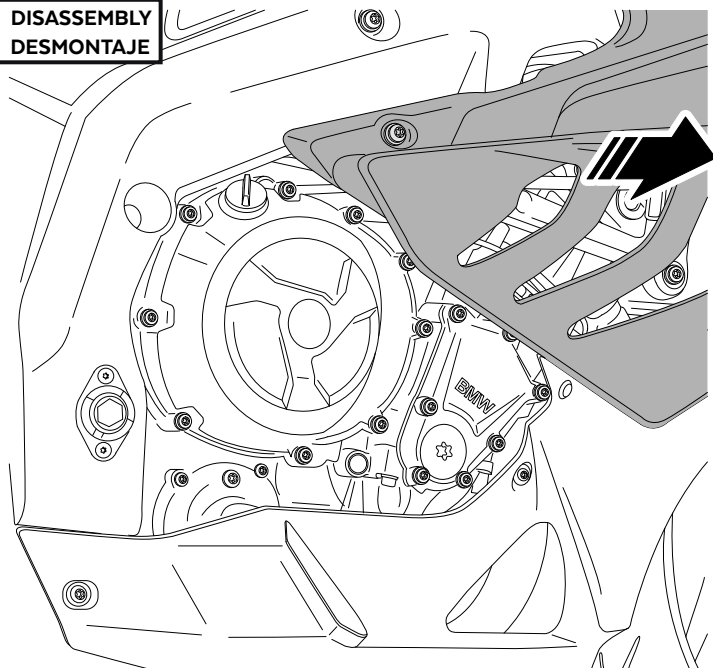


4

3,00 N/m + ángulo giro 90° - Par de apriete
2,21 lbf/ft + turning angle 90°- Tightening torque

2


ASSEMBLY
MONTAJE

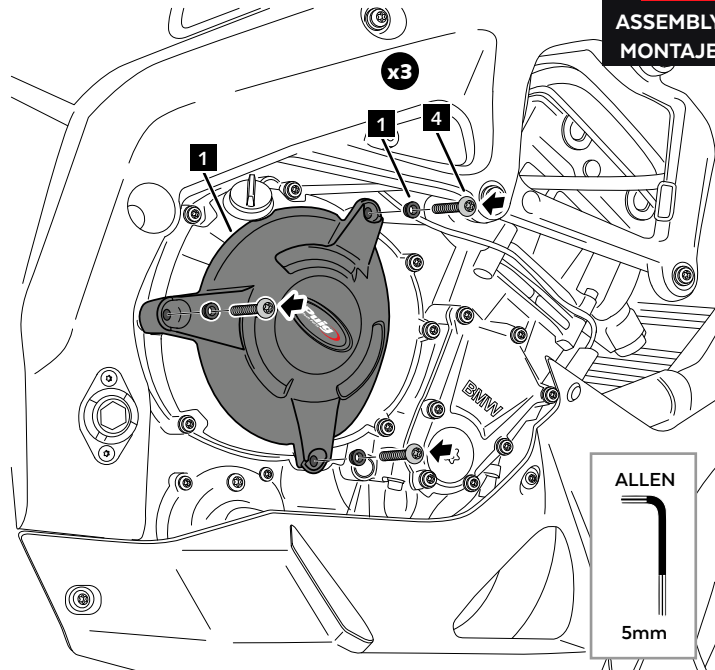

3

3 9,0 N/m - Par de apriete
6,64 lb/ft - Tightening torque

ASSEMBLY
MONTAJE

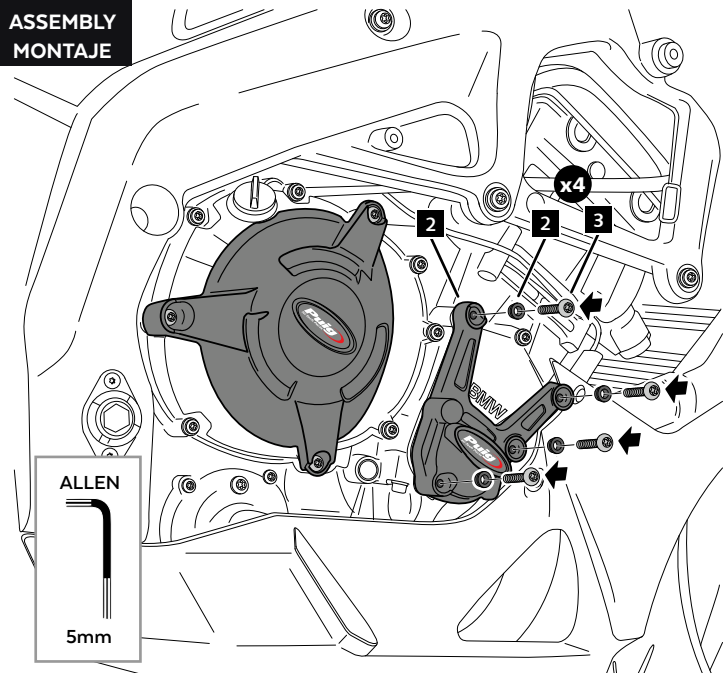

4

MONTAR EL CARENADO /
ASSEMBLE THE COVER

ASSEMBLY
MONTAJE

