

# CF MOTO 650NK '21-

## M O U N T I N G I N S T R U C T I O N S

REF 21653

WINDSHIELD NG SPORT



1 Person



30min





EASY



ALLEN

Nº 3  
Nº 5

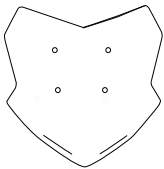
| ID | PIEZA/PART                                                                          | DESCRIPCIÓN                       | DESCRIPTION                    | QTY | REF             |
|----|-------------------------------------------------------------------------------------|-----------------------------------|--------------------------------|-----|-----------------|
| 1  |  | Cúpula Sport                      | Sport Screen                   | 1   | 10957W/H/N/FM3  |
| 2  |  | Soporte derecho (R)               | Right support (R)              | 1   | SOPOR2P7-R21653 |
| 3  |  | Soporte izquierdo (L)             | Left support (L)               | 1   | SOPOR2P7-L21653 |
| 4  |  | Casquillo Ø8,5x Ø13x 15           | Ø8,5x Ø13x 15 arrowhead        | 2   | CASQUI-M----614 |
| 5  |  | Tornillo allen M8x50 DIN912       | M8x50 DIN912 screw             | 2   | TORNI-D912--532 |
| 6  |  | Tope de goma Ø3,7-3,8 x 3,2mm     | Ø3,7-3,8 x 3,2mm bumper foot   | 2   | TOPE--POF-40022 |
| 7  |  | Silentblock M5                    | M5 silentblock                 | 4   | SILENBTM5-046/1 |
| 8  |  | Arandela de nylon M5x1            | M5x1 nylon washer              | 4   | ARNV0000000245  |
| 9  |  | Tornillo Allen M5x16 Ø11 ISO 7380 | M5x16 Ø11 ISO 7380 Allen screw | 4   | TORNI-I7380-493 |
| 10 |  | Tapón tornillo M5                 | M5 screw cap                   | 4   | TAPON-----85    |

# CF MOTO 650NK '21-

## INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**1**

**DISASSEMBLY  
DESMONTAJE**

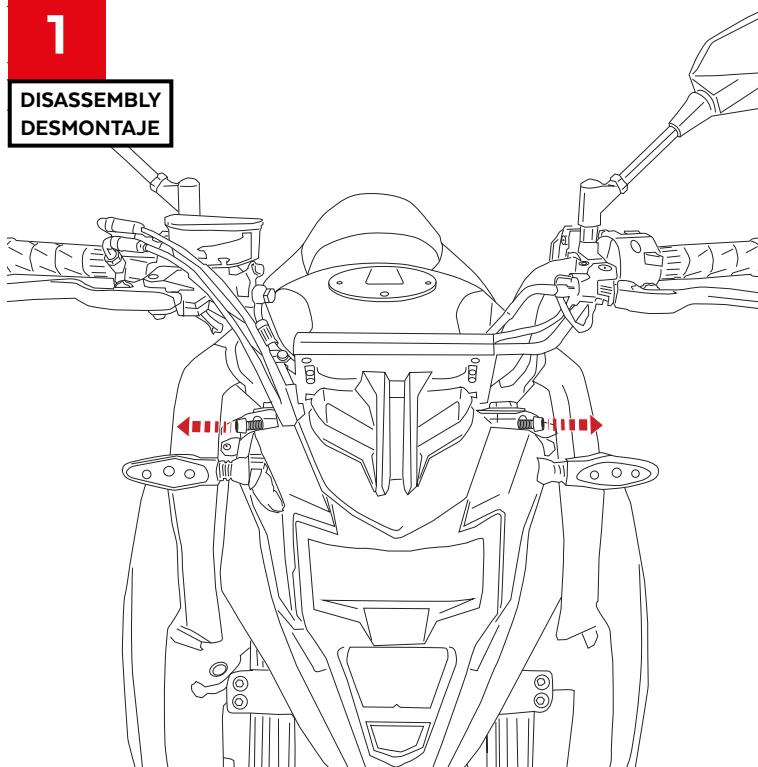

**2**


**ASSEMBLY  
MONTAJE**

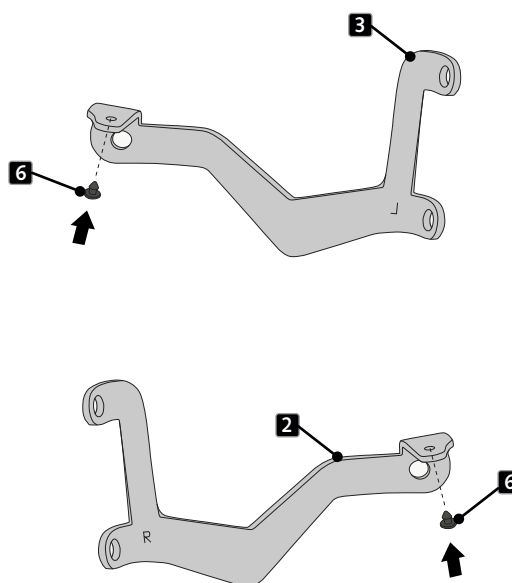

**3**

**ASSEMBLY  
MONTAJE**

**5** Par de apriete - 20 Nm  
Tightening torque - 20 Nm

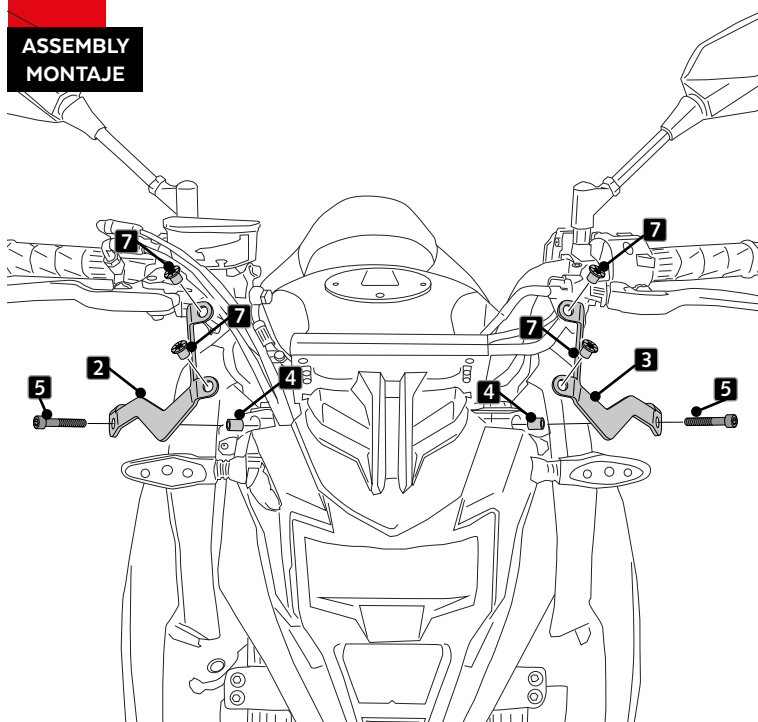

**9** Par de apriete - 2 Nm  
Tightening torque - 2 Nm

**4**

**ASSEMBLY  
MONTAJE**

