


BMW R1300GS '23- / R1300GS ADVENTURE '24-

M O U N T I N G I N S T R U C T I O N S

REF 21895

GUARDABARROS TRASERO / REAR MUDGUARD

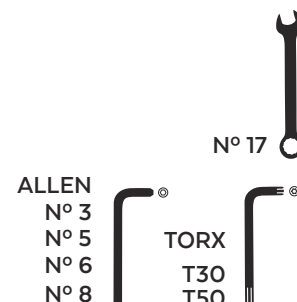


ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Guardabarros	Rear Mudguard	1	21895 J/C M3
2		Soporte adaptador	Adapter support	1	SOPORIP4--21895
3		Soporte aluminio	Aluminum Support	1	SOPORFUN-21895-
4		Silentblock	Silentblock	3	SILENBGONE--064
5		Tornillo Allen M5x14 ISO 7380	M5x14 ISO 7380 Allen screw	3	TORNI-I7380-610
6		Casquillo con valona M5	M5 Bush with flange	3	CASQUI-----517
7		Arandela Grower DIN127 M6	DIN127 M6 washer	3	ARAND-D127--528
8		Tapón tornillo M5 ISO 7380	M5 ISO 7380 screw cap	3	TAPON-----85
9		Tornillo Allen M10x55 DIN 7984 (A4 Inox)	M10x55 DIN 7984 (A4 Inox) Allen screw	1	TORNI-D7984-940
10		Tuerca autoblocante M10	M10 lock nut	1	TUEA-D985.8-M10
11		Casquillo Ø10,5 xØ14 x20 mm	Ø10,5 xØ14 x20 mm Arrowhead	1	CASQUII01420299
12		Tornillo Allen M10x35 DIN 7984 (A4 Inox)	M10x35 DIN 7984 (A4 Inox) Allen screw	1	TORNI-D7984-941
13		Tornillo Allen M10x20 DIN 7984 (A4 Inox)	M10x20 DIN 7984 (A4 Inox) Allen screw	1	TORNI-D7984-942
14		Tornillo Allen M6x10 DIN 7984 (A4 Inox)	M6x10 DIN 7984 (A4 Inox) Allen screw	2	TORNI-D7984-943
15		Tornillo Allen M6x16 DIN 7984 (A4 Inox)	M6x16 DIN 7984 (A4 Inox) Allen screw	1	TORNI-D7984-944
16		Tornillo Allen M6x30 DIN 7984 (A4 Inox)	M6x30 DIN 7984(A4 Inox) Allen screw	1	TORNI-D7984-946
17		Abrazadera cables negra 100x2,5mm	100x2,5mm cables ties	1	BRIDANI00X2'5-N

BMW R1300GS '23- / R1300GS ADVENTURE '24-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

DISASSEMBLY
DESMONTAJE

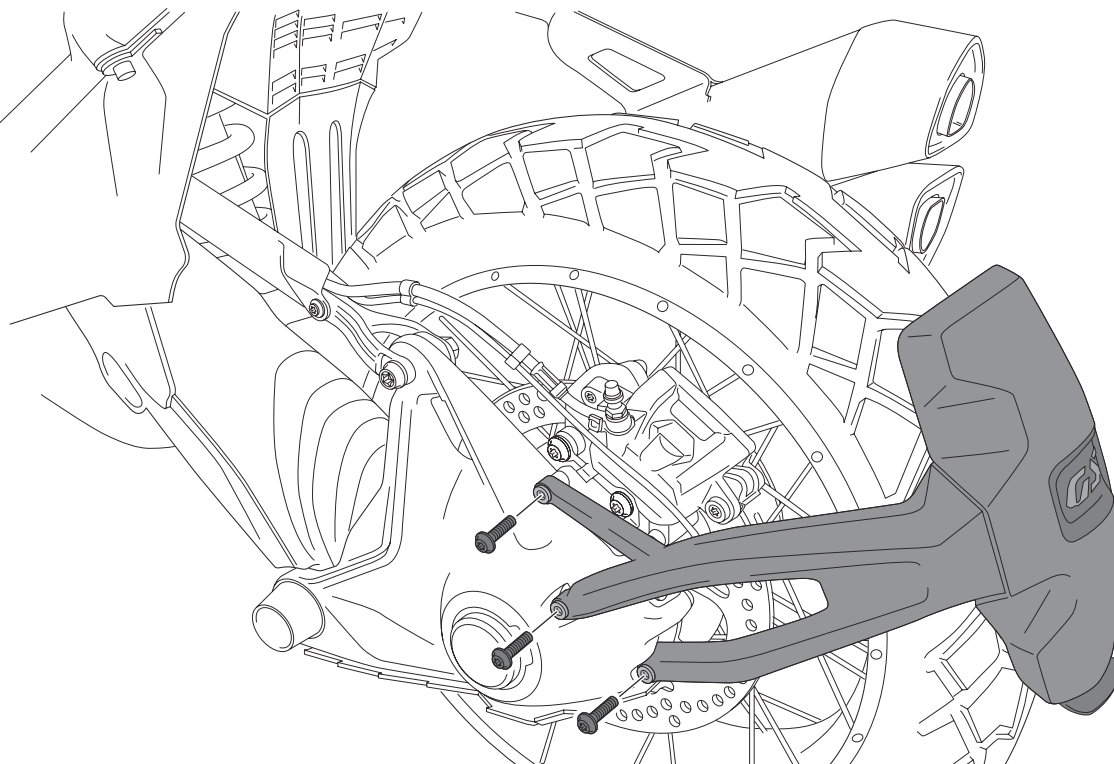

2

DISASSEMBLY
DESMONTAJE

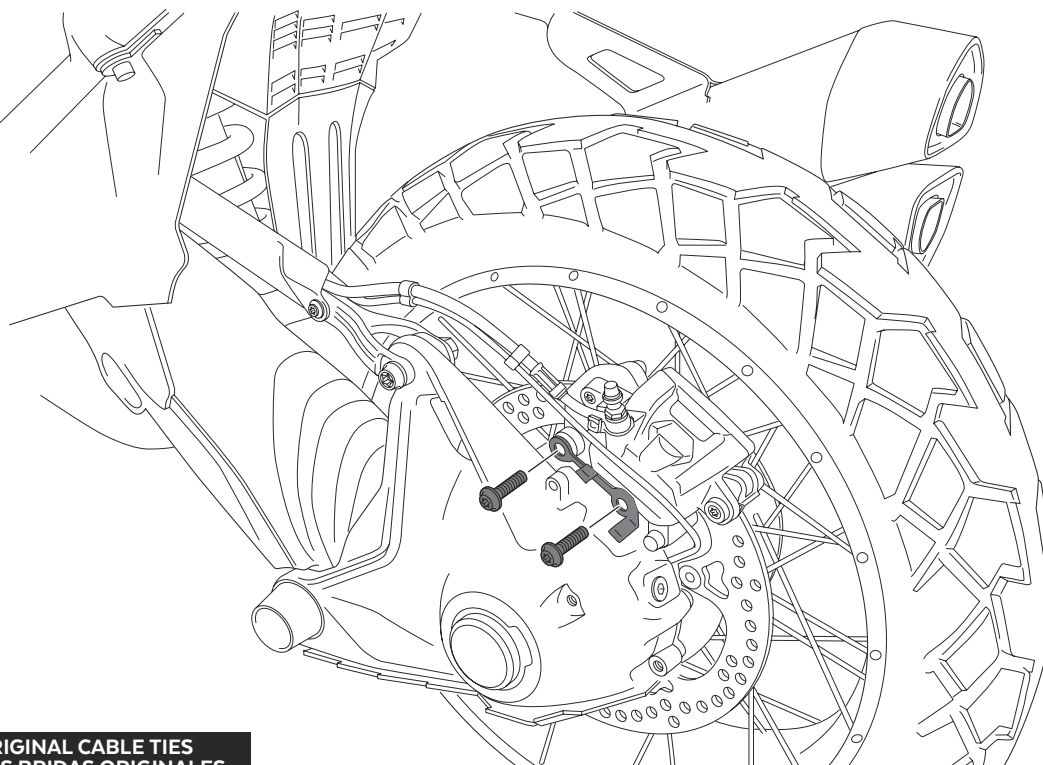


REMOVE ORIGINAL CABLE TIES
RETIRAR LAS BRIDAS ORIGINALES

BMW R1300GS '23- / R1300GS ADVENTURE '24-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

3


ASSEMBLY
MONTAJE

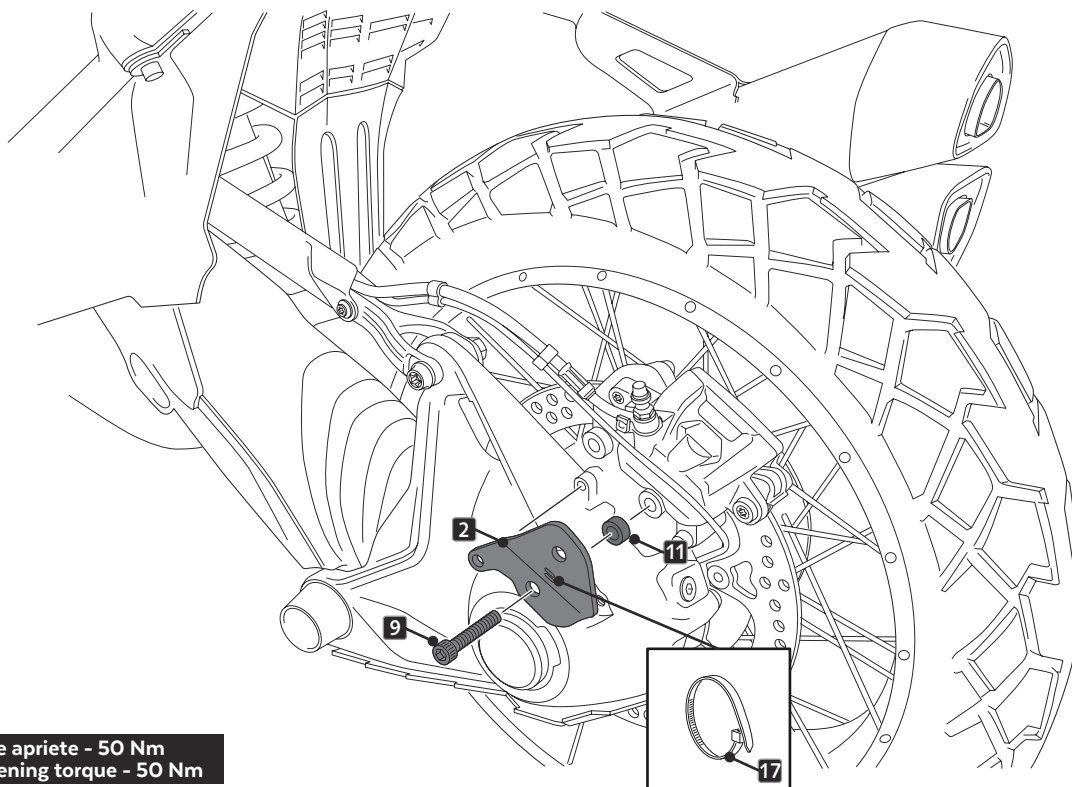

9 Par de apriete - 50 Nm
Tightening torque - 50 Nm

4

ASSEMBLY
MONTAJE

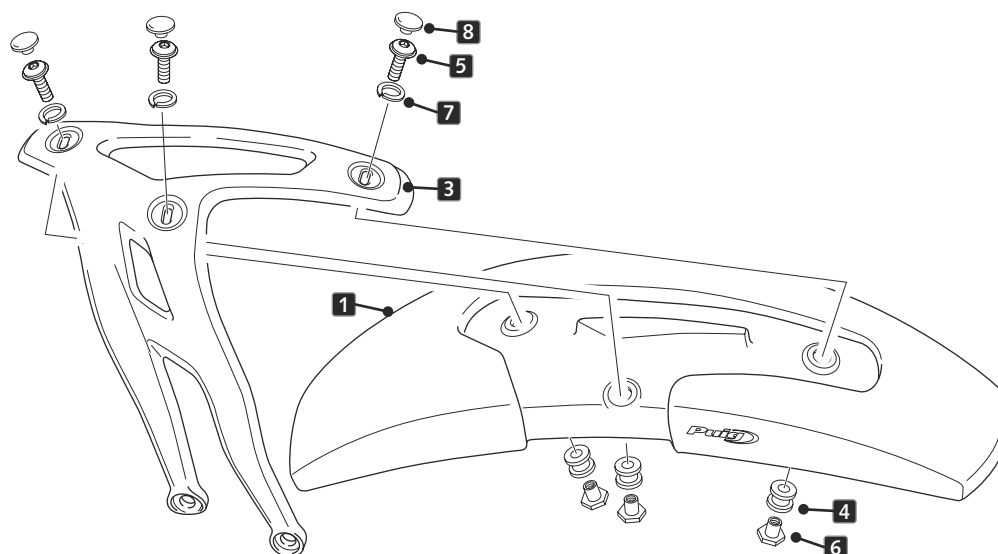

BMW R1300GS '23- / R1300GS ADVENTURE '24-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

5B

ASSEMBLY
MONTAJE

OPTION B :
PUIG REAR MUDGUARD **WITH**
ORIGINAL REAR MUDGUARD

ZONA DELICADA,
PELIGRO DE RAYADA,
DURANTE EL MONTAJE
MÁXIMA PRECAUCIÓN !

DELICATE AREA,
RISK OF SCRATCHING,
DURING ASSEMBLY
MAXIMUM CAUTION!

STEP 2

STEP 1

STEP 3

A PIEZA ORIGINAL
ORIGINAL PART

5 Par de apriete - 3 Nm
Tightening torque - 3 Nm

12 Par de apriete - 50 Nm
Tightening torque - 50 Nm

13 Par de apriete - 50 Nm
Tightening torque - 50 Nm

16 Par de apriete - 8 Nm
Tightening torque - 8 Nm



A Par de apriete - 8 Nm
Tightening torque - 8 Nm

SE RECOMIENDA REALIZAR EL REAPRIETE
DE LA TORNILLERA CADA 1000 Km

IT IS RECOMMENDED TO CHECK TIGHTENING
OF THE BOLTS EVERY 1000 Km



A SE RECOMIENDA UTILIZAR LÍQUIDO FIJADOR DE ROSCAS.
16 IT IS RECOMMENDED TO USE THREAD LOCKING LIQUID

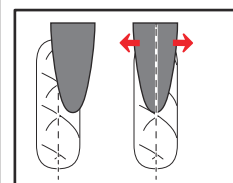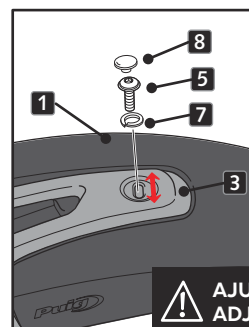

**AJUSTAR POSICIÓN DE ID 1
ADJUST POSITION ID1**