

BMW F900GS '24-

M O U N T I N G I N S T R U C T I O N S

REF 21980

TOURING SCREEN




ID.	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Cúpula Touring	Touring screen	1	21980W/H/FM3
2		Tornillo especial M5x9 Long Hexagonal 14 (Rosca int M5x12)	M5x9 special screw, Hexagonal lenght 14 (M5x12)	4	TORNI-EC----597
3		Arandela metálica M5 DIN 9021 Ø5,3x Ø15 x1,2 (Negra)	M5 DIN 9021 Ø5,3x Ø15 x1,2 Washer	4	ARAND-PD5---152
4		Silentblock Ø12xØ6x9	Ø12xØ6x9 Silentblock	4	AROPASACABLES-1
5		casquillo con valona Ø12xØ6,8x7,3	Ø12xØ6,8x7,3 Bush with flange	4	CASQUI-1A---750
6		Tornillo allen M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 Allen screw	4	TORNI-I7380-493
7		Tapón tornillo M5 ISO 7380	M5 ISO 7380 Screw cap	4	TAPON-----85

BMW F900GS '24-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

DISASSEMBLY
DESMONTAJE

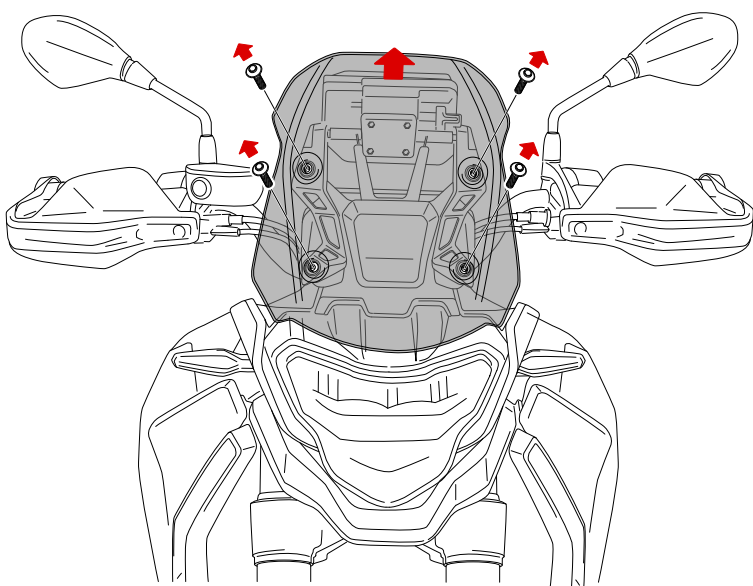


2

ASSEMBLY
MONTAJE

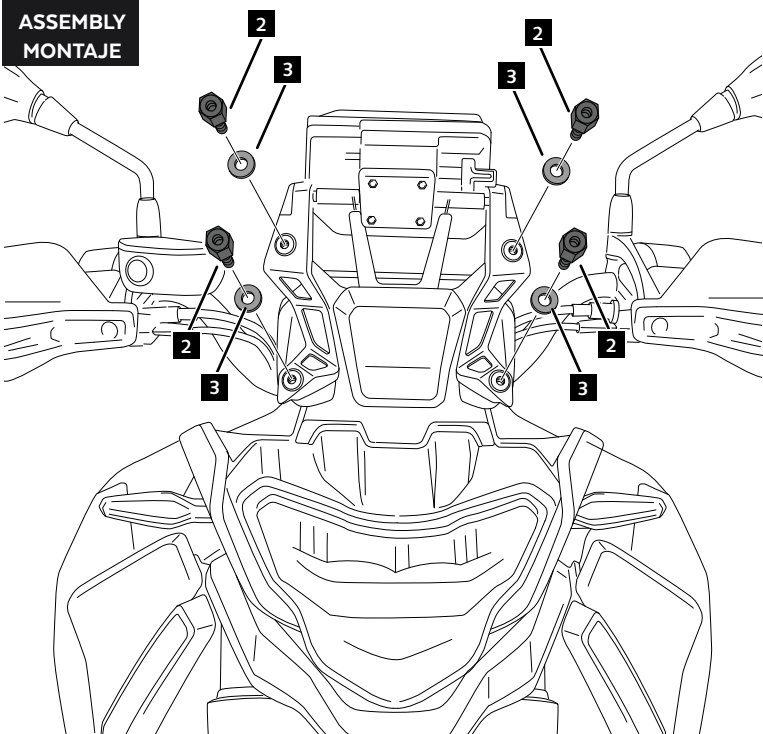

3

ASSEMBLY
MONTAJE

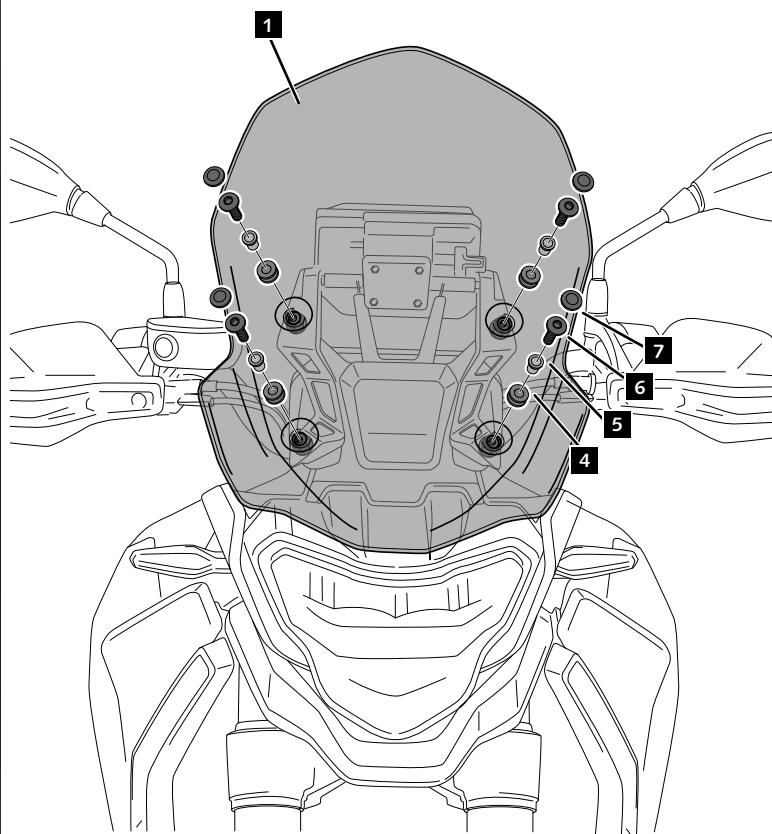

5 Par de apriete - 3,5 Nm
Tightening torque - 3,5 Nm