

PART NUMBER: 22052C

FORK PROTECTOR KIT



FORK PROTECTOR KIT



(EN) USE:


The placing/laying of the sticker is simple and before starting surfaces must be clean. For this use alcohol. Remove the end of the base of the sticker and display it on the surface. Once the sticker is correctly located you can remove slowly and gently the paper base, applying it with the hand to remove air.

(ES) UTILIZACIÓN:

La colocación del adhesivo es sencilla y antes de empezar, debe tener las superficies bien limpias. Para ello, puede utilizar alcohol. Debe retirar una punta del soporte del adhesivo y presentarlo en la moto. Una vez posicionado correctamente, puede retirar el papel soporte, despacio y aplicando suavemente con la mano para eliminar el aire.

(DE) ANWENDUNG:

Das Aufkleben des Aufklebers ist einfach. Vor dem Aufkleben muss die Oberfläche sauber sein. Nutzen sie hierfür Alkohol. Entfernen Sie eine Ecke des Trägerpapiers und legen den Aufkleber auf die Oberfläche. Sobald der Aufkleber in der richtigen Position liegt, kann das Trägerpapier langsam und vorsichtig entfernt werden und mit der Hand leichter Druck ausgeübt werden, um Luft herauszudrücken.

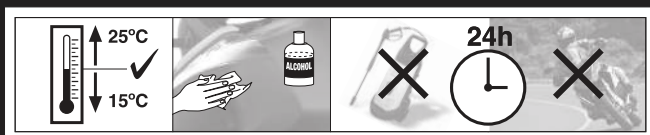

PART NUMBER: 22052C

www.puig.tv

www.puigusa.com

PART NUMBER: 22052N

FORK PROTECTOR KIT



FORK PROTECTOR KIT



(EN) USE:


The placing/laying of the sticker is simple and before starting surfaces must be clean. For this use alcohol. Remove the end of the base of the sticker and display it on the surface. Once the sticker is correctly located you can remove slowly and gently the paper base, applying it with the hand to remove air.

(ES) UTILIZACIÓN:

La colocación del adhesivo es sencilla y antes de empezar, debe tener las superficies bien limpias. Para ello, puede utilizar alcohol. Debe retirar una punta del soporte del adhesivo y presentarlo en la moto. Una vez posicionado correctamente, puede retirar el papel soporte, despacio y aplicando suavemente con la mano para eliminar el aire.

(DE) ANWENDUNG:

Das Aufkleben des Aufklebers ist einfach. Vor dem Aufkleben muss die Oberfläche sauber sein. Nutzen sie hierfür Alkohol. Entfernen Sie eine Ecke des Trägerpapiers und legen den Aufkleber auf die Oberfläche. Sobald der Aufkleber in der richtigen Position liegt, kann das Trägerpapier langsam und vorsichtig entfernt werden und mit der Hand leichter Druck ausgeübt werden, um Luft herauszudrücken.

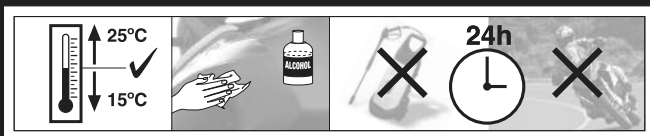

PART NUMBER: 22052N

www.puig.tv

www.puigusa.com