

KAWASAKI Z400 '19

REF 3546N

PROTECTOR MOTOR PARA / CRASH PADS FOR / STURZPADS FÜR



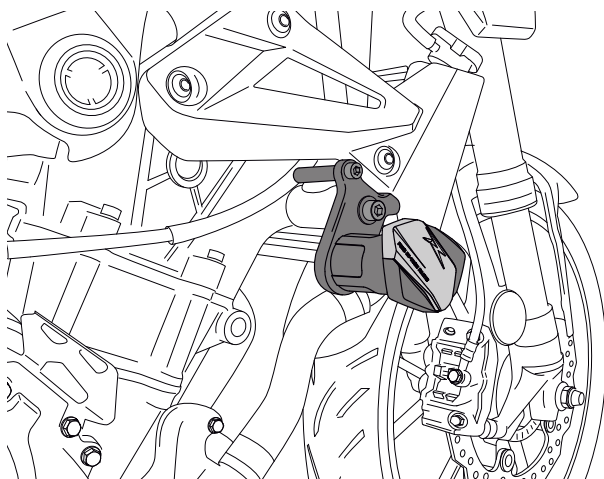
1 Person









45 min



EASY



CONSULTAR EN NUESTRA PAGINA WEB LA
DISPONIBILIDAD DEL VIDEO DE MONTAJE
DE ESTA REFERENCIA.
CONSULT OUR WEBSITE THE VIDEO MOUNT
AVAILABILITY OF THIS REFERENCE.


ID.	PIEZA / PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Juego tapas	Covers set	1	CONGOMANPROR12
2		Tornillo M10/150x30 DIN912	M10/150x30 DIN912 screw	2	M2TM10150030A9B
3		Arandela glover M10 DIN6798/A	M10 DIN6798/A washer	2	M2AM10DIN6798ZB
4		Arandela M10 DIN125/A	M10 DIN125/A washer	4	M2AM10DIN125AZB
5		Protector Nylon 85mm	Nylon protector 85mm	2	PROTECNLR12-145
6		Casquillo aluminio	Right steel plate	2	CASQUI13-2-1313
7		Pletina acero	Steel plate	2	PLATI373-0-0373
8		Casquillo aluminio c/negro (Ø22x46)	Black aluminium spacer (Ø22x46)	1	CASQU112-0-1412
9		Casquillo aluminio c/negro (Ø22x82)	Black aluminium spacer (Ø22x82)	1	CASQU437-0-1737
10		Tornillo M6x20 DIN912 c/negro	M6x20 DIN912 black screw	2	TORNI-AD912-489
11		Casquillo aluminio (Ø10x40)	Aluminium spacer (Ø10x40)	2	CASQU438-0-1738
12		Tornillo M10/125x100 DIN912	M10/125x100 DIN912 screw	1	TORNIAD912-0329
13		Tornillo M10/125x130 DIN912	M10/125x130 DIN912 screw	1	M2TM10125130A9B

KAWASAKI Z400 '19

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

1

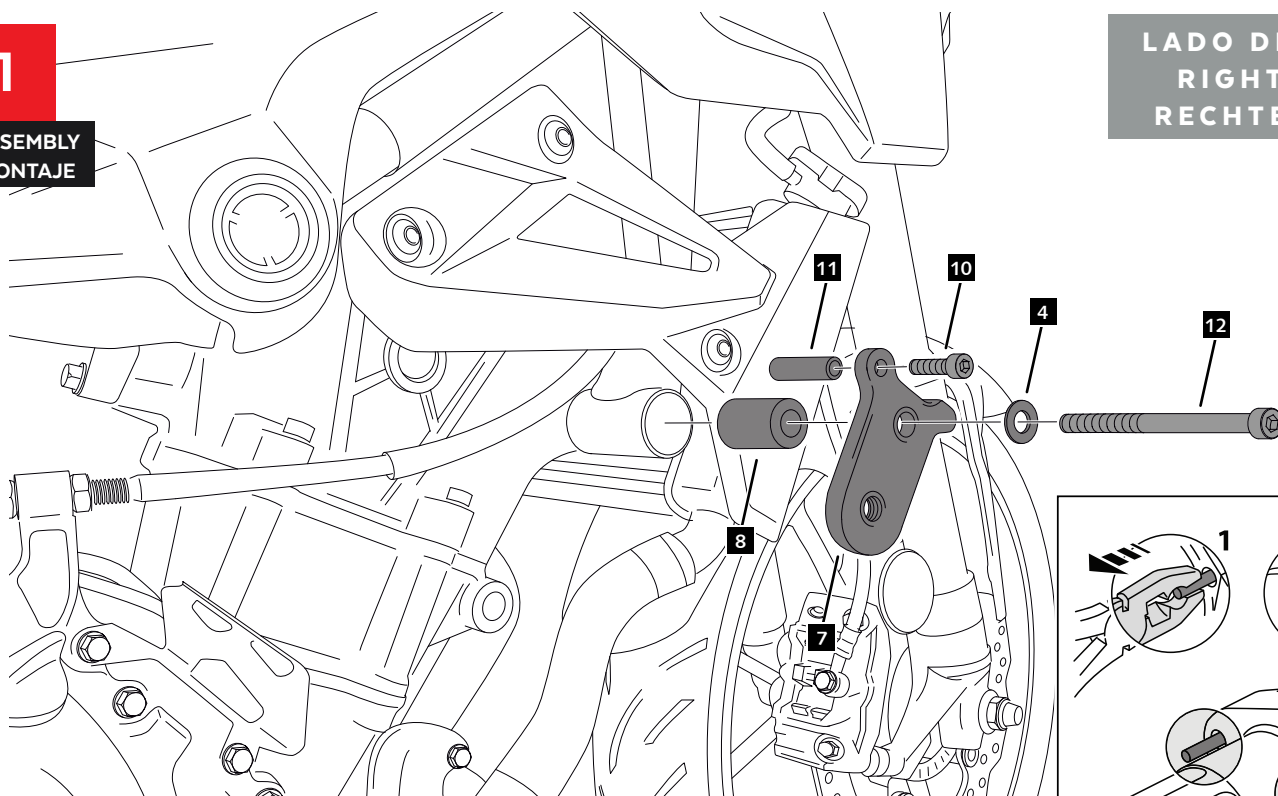
ASSEMBLY
MONTAJE



LADO DERECHO
RIGHT SIDE
RECHTE SEITE

2

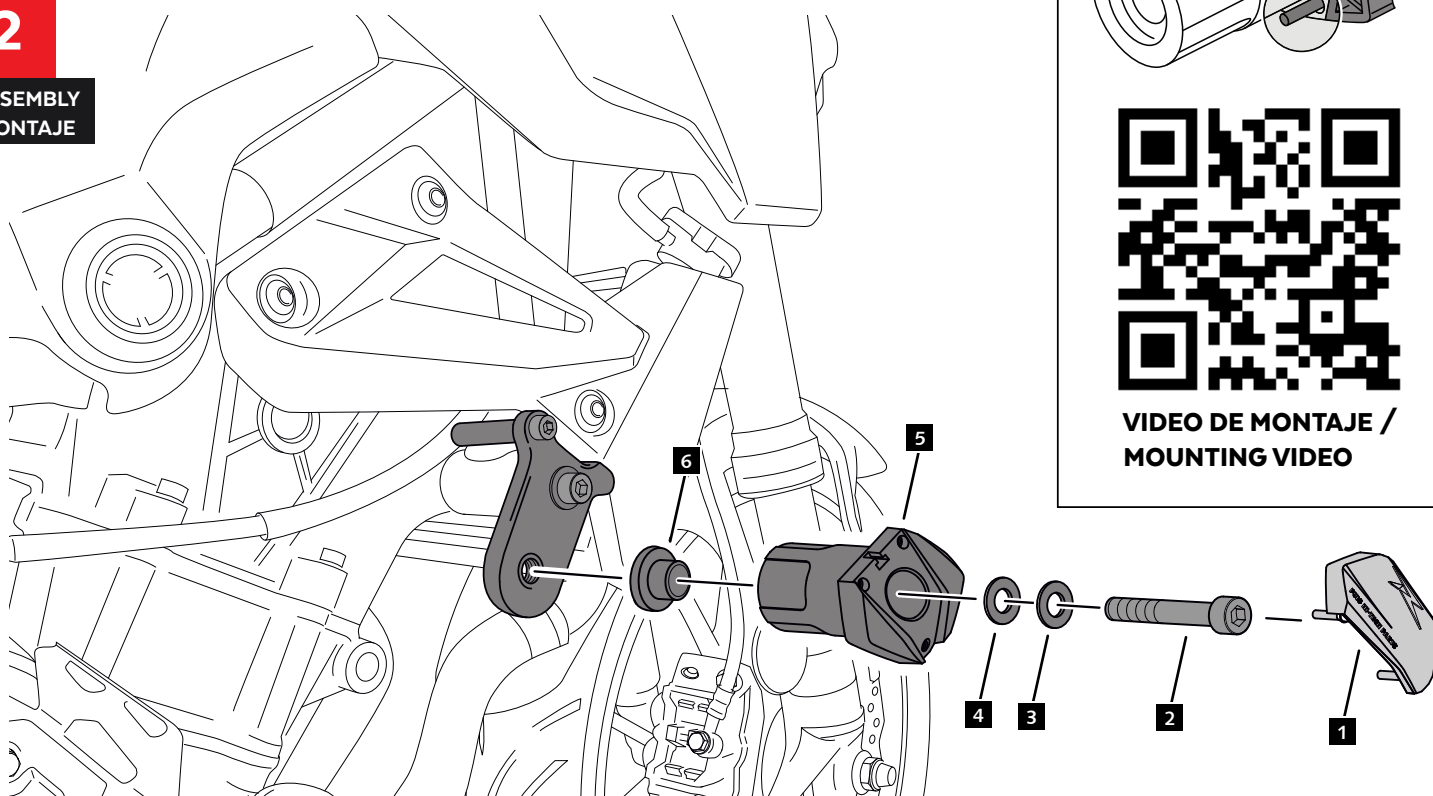ASSEMBLY
MONTAJE



VIDEO DE MONTAJE /
MOUNTING VIDEO

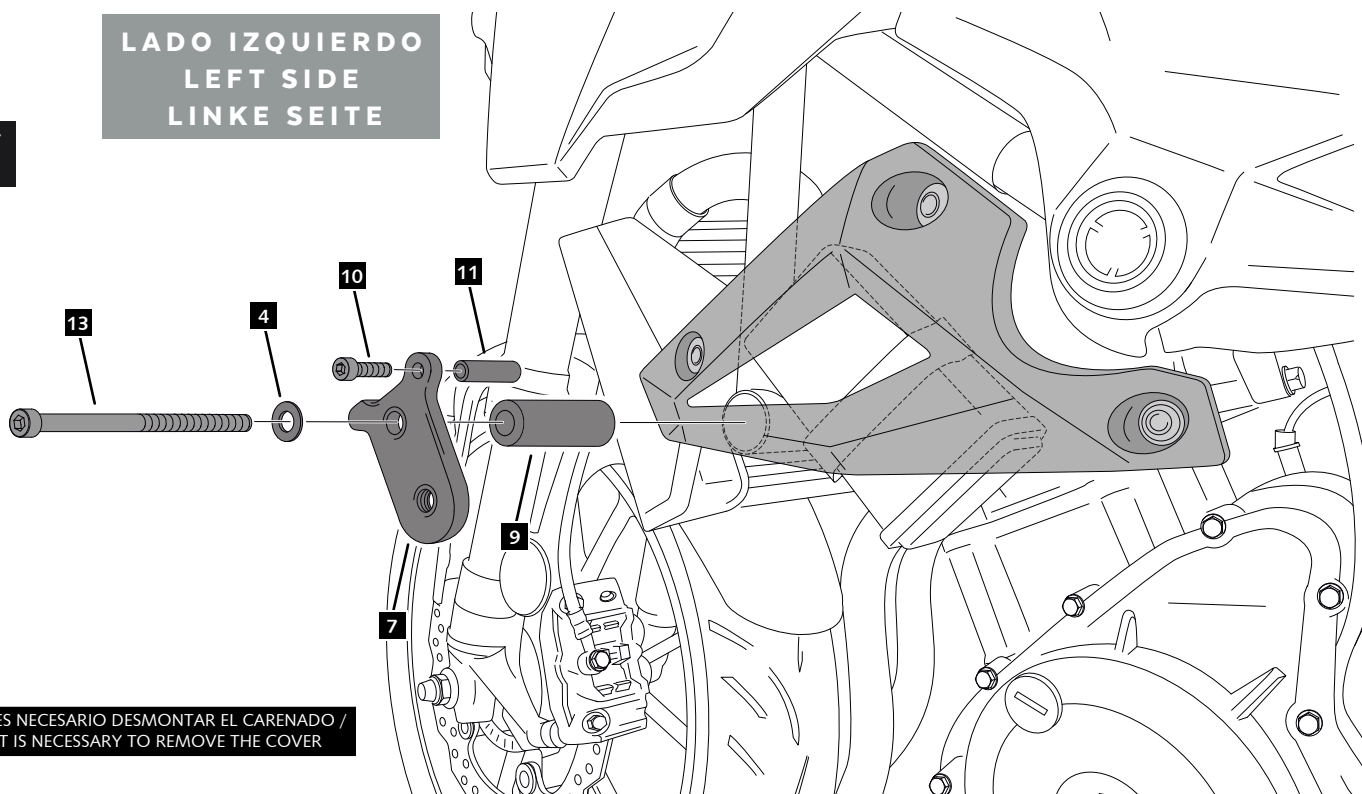
KAWASAKI Z400 '19

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

3

ASSEMBLY
MONTAJE

LADO IZQUIERDO
LEFT SIDE
LINKE SEITE



4

ASSEMBLY
MONTAJE

