

# HARLEY DAVIDSON SPORTSTER 883/1200

## M O U N T I N G I N S T R U C T I O N S

REF 3688

FRONT FENDER



1 Person



20 min






EASY



N° 8  
N° 13



ALLEN  
N° 3  
N° 5

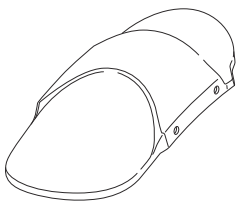
| ID | PIEZA/PART                                                                          | DESCRIPCIÓN                       | DESCRIPTION                    | QTY | REF             |
|----|-------------------------------------------------------------------------------------|-----------------------------------|--------------------------------|-----|-----------------|
| 1  |  | Guardabarros delantero            | Front Fender                   | 1   | SOPOREMBIP13735 |
| 2  |  | Soporte metálico derecho          | Right metal suport             | 1   | SOPOR2P2-L-3688 |
| 3  |  | Soporte metálico izquierdo        | Left metal suport              | 1   | SOPOR2P2-R-3688 |
| 4  |  | Tuerca autoblocante M5            | M5 Lock Nut                    | 4   | TUERCA-D985-535 |
| 5  |  | Tornillo Allen M5x11 Ø11 ISO 7380 | M5x11 Ø11 ISO 7380 Allen screw | 4   | TORNI-AI----520 |
| 6  |  | Tapón tornillo Allen M5 ISO 7380  | M5 ISO 7380 Allen screw cap    | 4   | TAPON-----85    |

# HARLEY DAVIDSON SPORTSTER 883/1200

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**1**

DISASSEMBLY  
DESMONTAJE

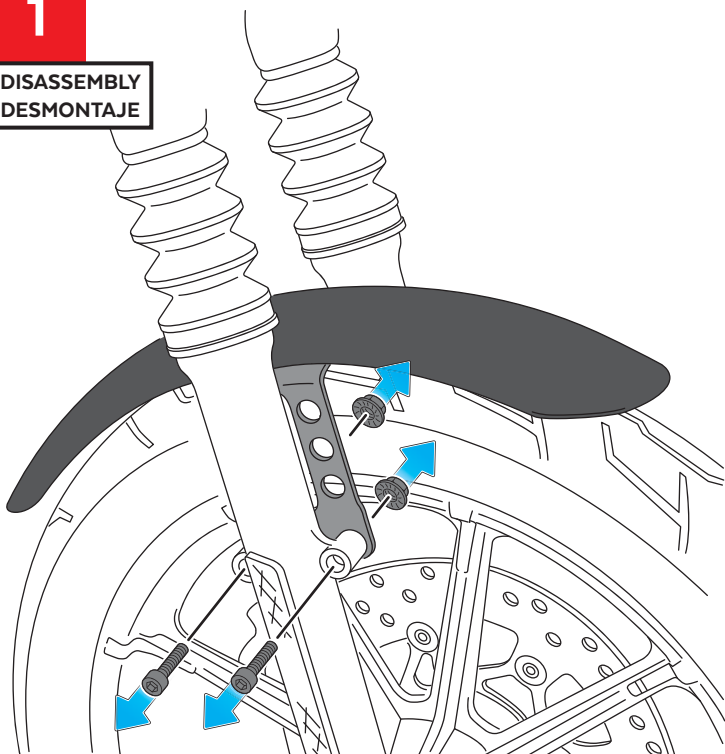


**2**

DISASSEMBLY  
DESMONTAJE

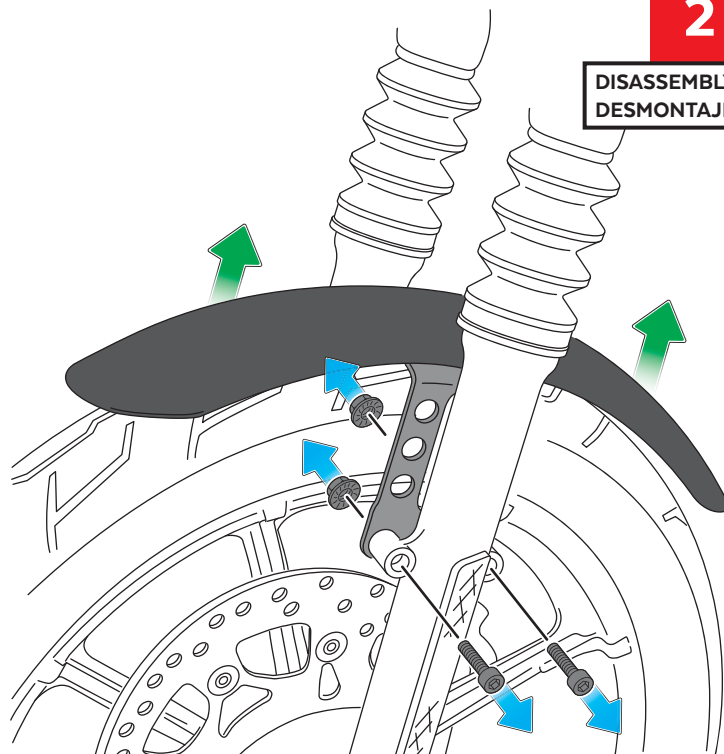


**3**

ASSEMBLY  
MONTAJE

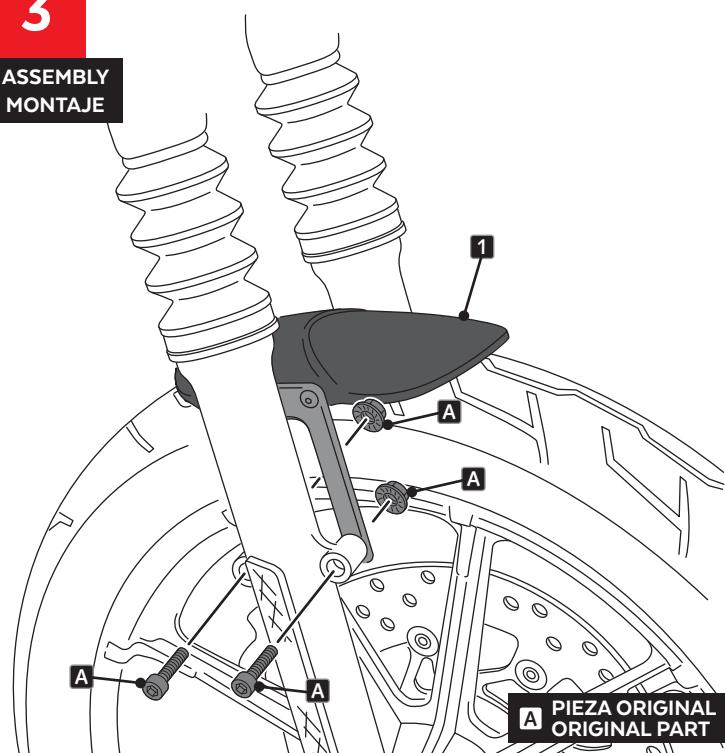

**4**

ASSEMBLY  
MONTAJE

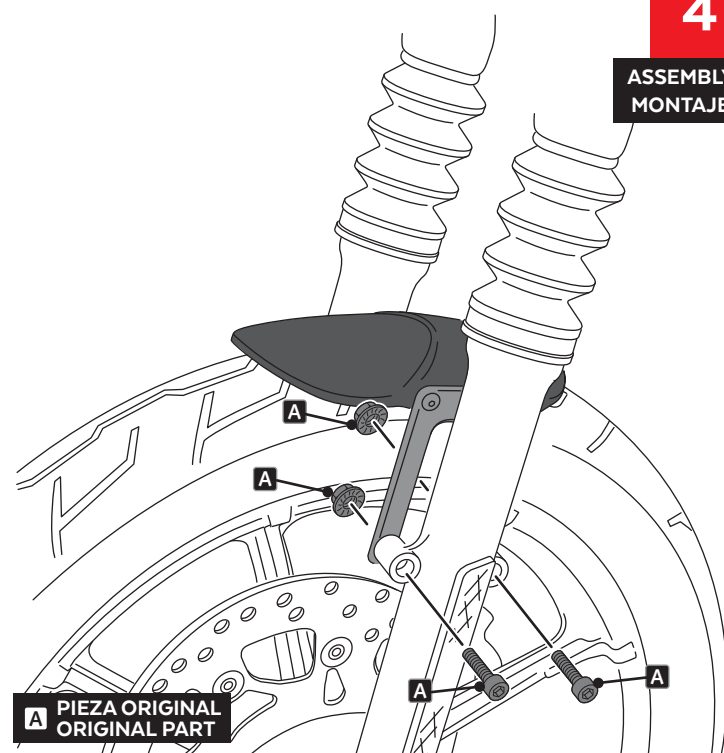

# HARLEY DAVIDSON SPORTSTER 883/1200

## EXPLOTING

