

MOTOPLASTIC, S.A.

Molí de la sal, 1 - 08403 Granollers (Barcelona) SPAIN

Tel. 34 93 849 06 33 - Fax 34 93 849 09 88

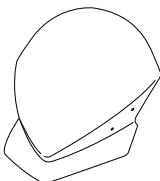

info@puig.tv - info@puigusa.com

www.puig.tv - www.puigusa.com

Ref.: 7009

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

CARENABRÍS ADAPTABLE A - WINDSHIELD FOR - SCHEIBE FÜR HONDA CTX700N

ID.	PIEZA / PART	DESCRIPCIÓN	DESCRIPTION	QTY.
1		Carenabrís	Windshield	1
2		Soporte metálico derecho	Right metal support	1
3		Soporte metálico izquierdo	Left metal support	1
4		Casquillo Ø int. 8,5 x Ø ext. 13x15	Ø inner 8,5 x Ø outer 13x15 arrowhead	4
5		Tornillo Allen DIN 912 M8x50	M8x50 Allen screw DIN 912	4
6		Silentblock M5	M5 silentblock	4
7		Arandela de nylon M5x0,5	M5x0,5 nylon washer	4
8		Tornillo Allen M5x16 ISO 7380 (negro)	M5x16 ISO 7380 (black) Allen screw	4
9		Separador de silicona Ø16 (TOPE-PA-16DX8- -)	Silicon sticker Ø16mm (TOPE-PA-16DX8- -)	1
10		Tapón tornillo M5 ISO 7380	M5 ISO 7380 screw tap	4

Created by: www.clandissey.com

