


DEFLECTORES MANILLAR PARA - HANDLEBAR DEFLECTOR FOR - LENKER DEFLEKTOR FÜR BMW R1200GS LC / R1200GS LC ADVENTURE / R1250GS / R1250GS ADVENTURE / S1000XR







Ref.: 9397

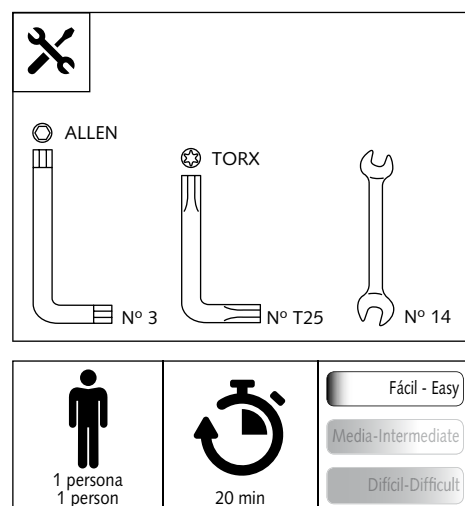

ID	PIEZA / PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF.
1		Deflector derecho	Right deflector	1	9397F/H/WM3
2		Deflector izquierdo	Left deflector	1	9397F/H/WM3
3		Soporte metálico derecho (R)	Right metal support (R)	1	SOPOR-2P-5-9397
4		Soporte metálico izquierdo (L)	Left metal support (L)	1	SOPOR-2P-5-9397
5		Silemblock Ø12xØ6x9	Ø12xØ6x9 Silemblock	2	AROPASACABLES-1
6		Casquillo con valona Ø12xØ6,8x6,5	Ø12xØ6,8x6,5 bush with flange	2	CASQUI-1A---750
7		Tornillo Allen M5x30 Ø11 ISO 7380	M5x30 Ø11 ISO 7380 Allen screw	2	TORNI-I7380-767
8		Casquillo Ø13xØ6,5x8,5	Ø13xØ6,5x8,5 bush	2	CASQUI-----0298
9		Tornillo Allen M5x11Ø11 ISO 7380	M5x11Ø11 ISO 7380 Allen screw	2	TORNI-AI----520
10		Arandela de Nylon M5x1	M5x1 Nylon washer	2	ARNV0000000245
11		Arandela de goma 4,5xØ11Øx2	4,5xØ11Øx2 Rubber washer	2	ARAND-EPDM--722
12		Tapon tornillo M5 ISO 7380	M5 ISO 7380 Allen screw cap	4	TAPON_____85

DEFLECTORES MANILLAR PARA - HANDLEBAR DEFLECTOR FOR - LENKER DEFLEKTOR FÜR BMW R1200GS LC / R1200GS LC ADVENTURE / R1250GS / R1250GS ADVENTURE / S1000XR

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

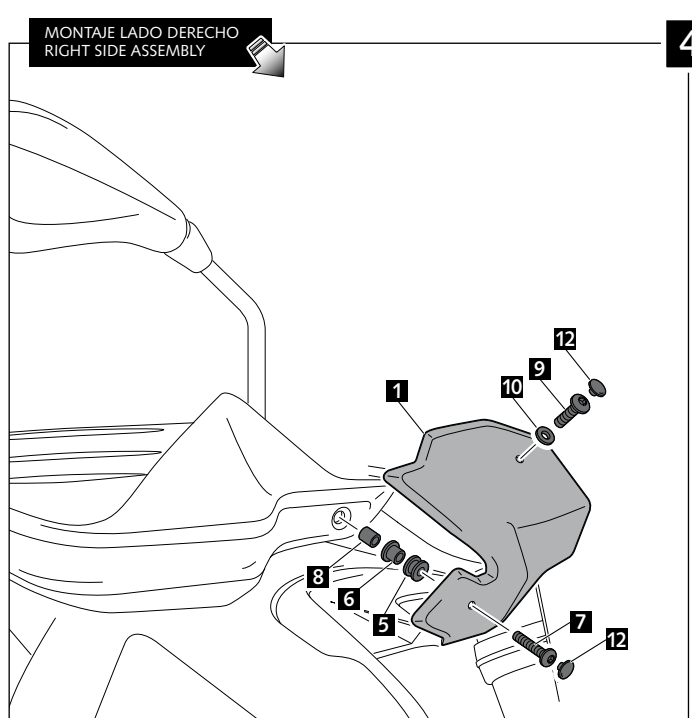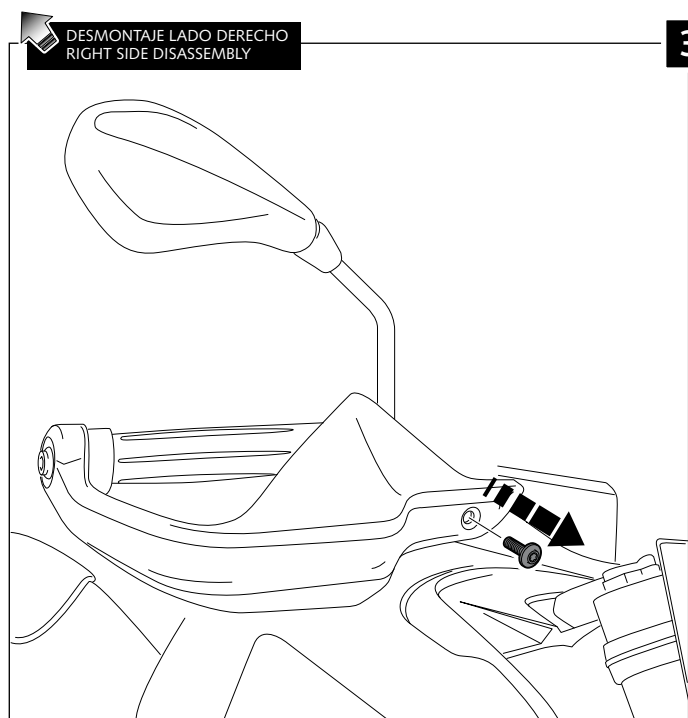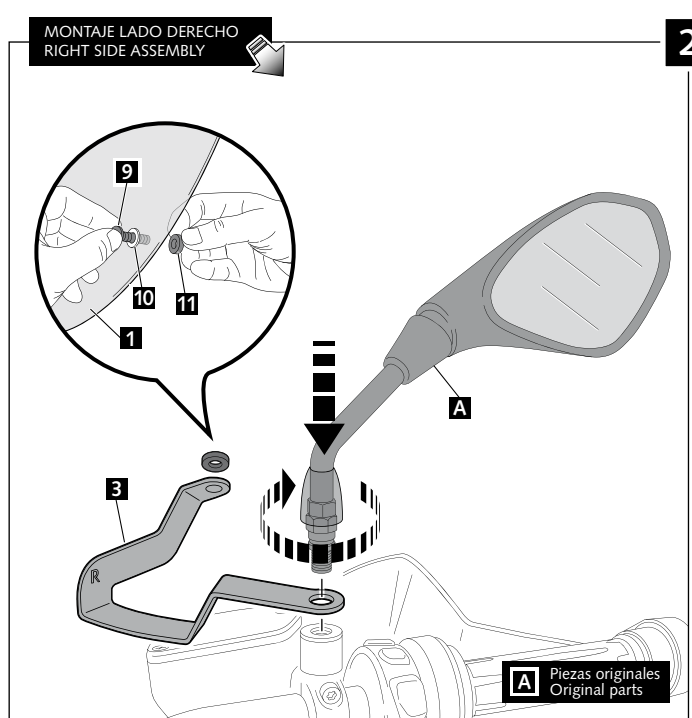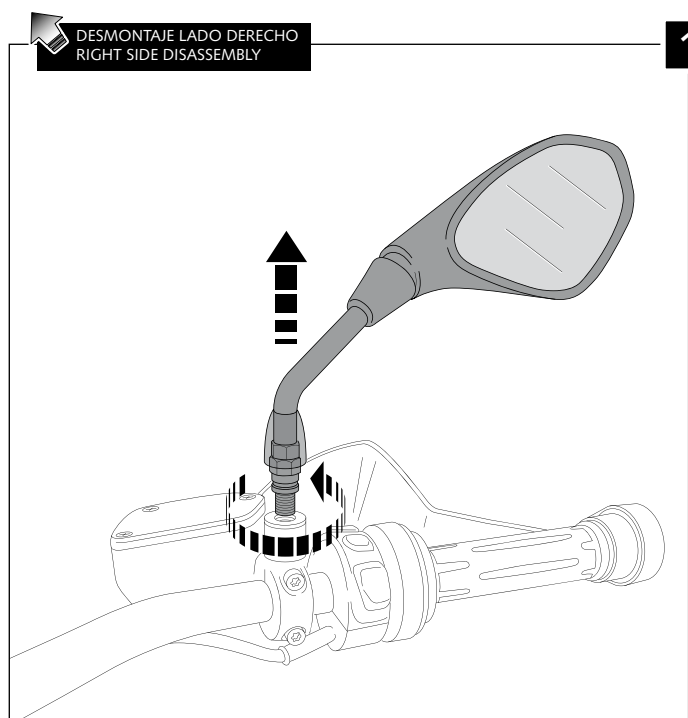

DEFLECTORES MANILLAR PARA - HANDLEBAR DEFLECTOR FOR - LENKER DEFLEKTOR FÜR BMW R1200GS LC / R1200GS LC ADVENTURE / R1250GS / R1250GS ADVENTURE / S1000XR

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

