

KTM 1290 SUPER ADVENTURE R/S '17-

M O U N T I N G I N S T R U C T I O N S

REF 9470

HEADLIGHT PROTECTOR



1 Person



15 min



EASY



ALLEN
Nº 2,5
3

TORX
Nº T27

ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Conjunto protectores faro policarbonato	Polycarbonate protectors set	1	9470WM3
2		Soporte metálico superior	Upper metal support	1	SOPOR-2P-6-9470
3		Soporte metálico inferior	Lower metal support	1	SOPOR-2P-6-9470
4		Tornillo ISO 7380 M4x8 (negro)	M4x8 ISO7380 allen screw	8	TORNI-I7380-757
5		Arandela de nylon M4	M4 nylon washer	16	ARNV00000000311
6		Casquillo Ø8x Ø14x 10	Ø8x Ø14x 10 arrowhead	2	CASQUI-----576
7		Casquillo Ø8,5x Ø14x 22	Ø8,5x Ø14x 22 arrowhead	2	CASQUI-----150
8		Tornillo Allen M5x35 Ø11 ISO 7380	M5x35 Ø11 ISO 7380 Allen screw	2	TORNI-I7380-805
9		Silentblock Ø9,5x Ø4,8 x7mm	Ø9,5x Ø4,8 x7mm silentblock	8	SILENBLOCK---90
10		Separador de silicona Ø12,5 x4	Ø12,5 x4 silicon adhesive spacer	2	TOPE-PA12,7X3,5


KTM 1290 SUPER ADVENTURE R/S '17-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

1


DISASSEMBLY
DESMONTAJE

WITHOUT AIR FILTER

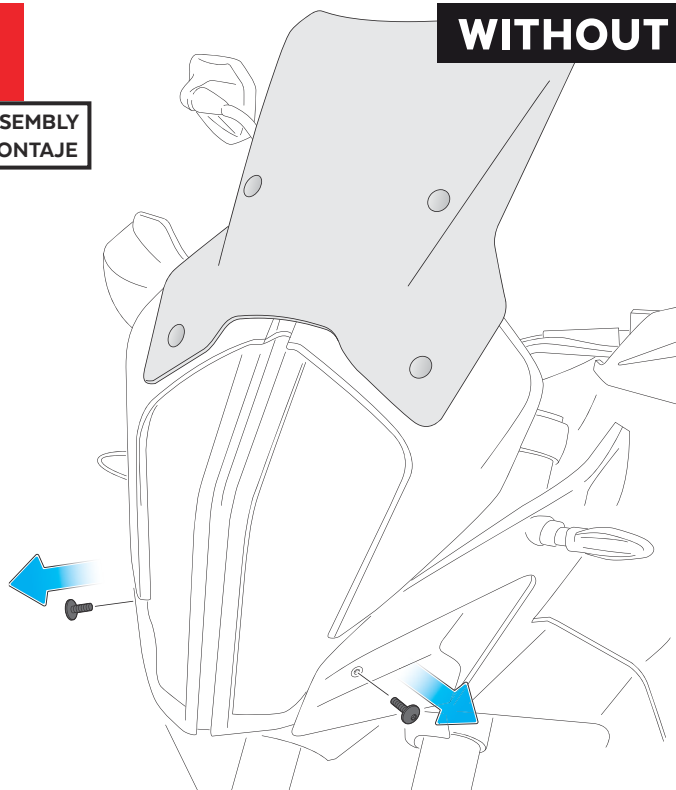


2

ASSEMBLY
MONTAJE

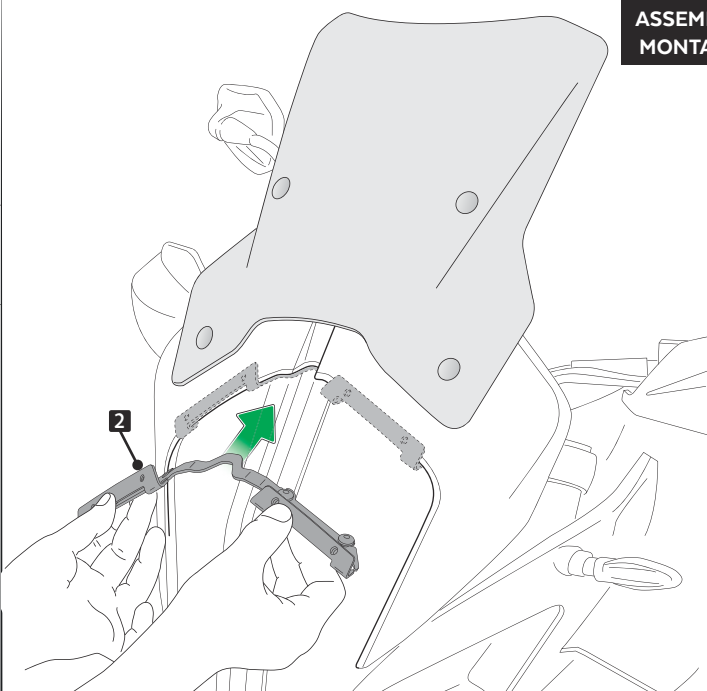


3

ASSEMBLY
MONTAJE

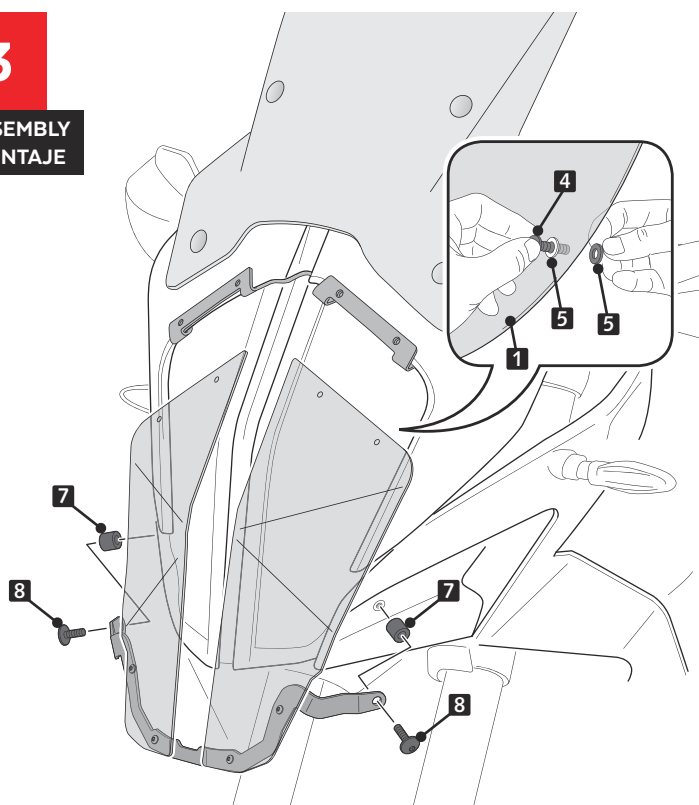

4

ASSEMBLY
MONTAJE

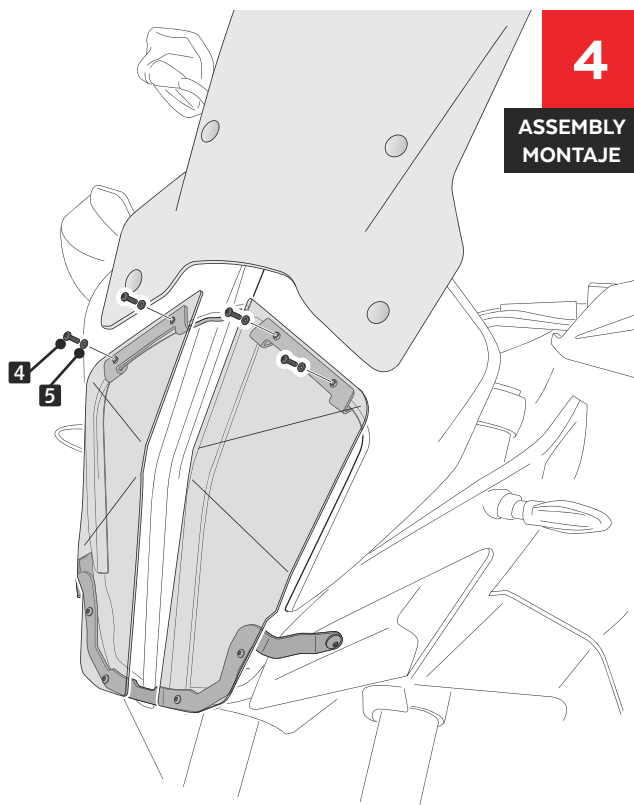


KTM 1290 SUPER ADVENTURE R/S '17-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

1


DISASSEMBLY
DESMONTAJE

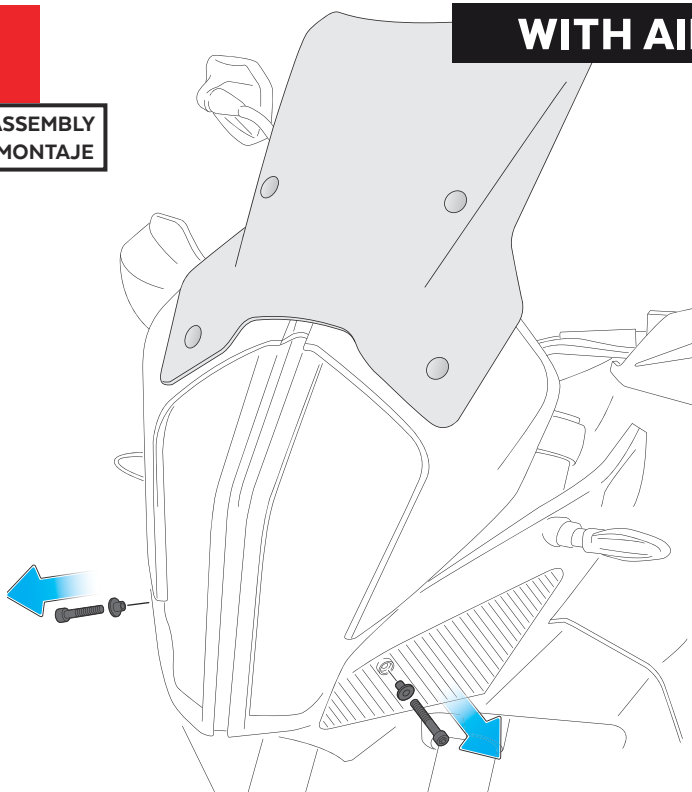

WITH AIR FILTER


2

ASSEMBLY
MONTAJE

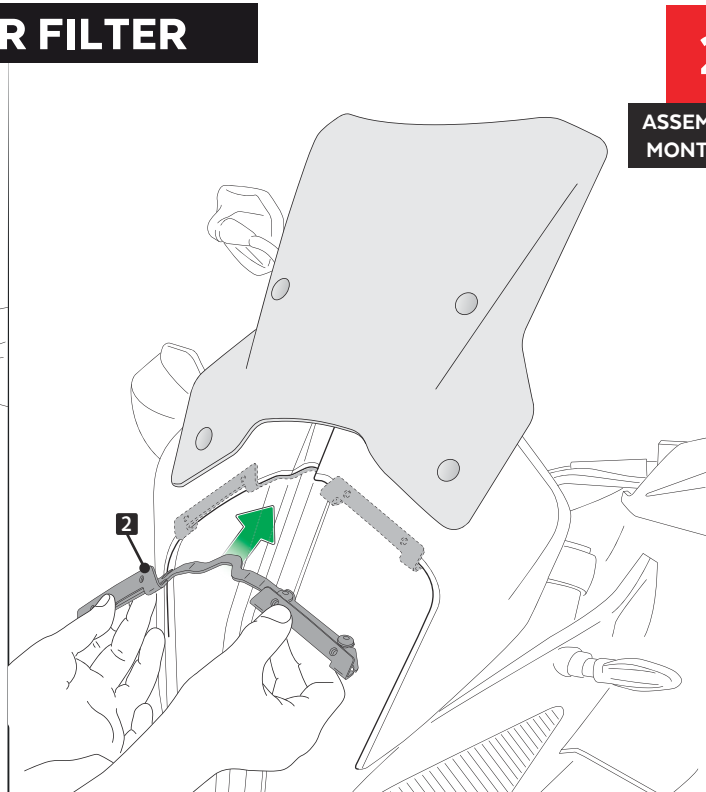

3


ASSEMBLY
MONTAJE

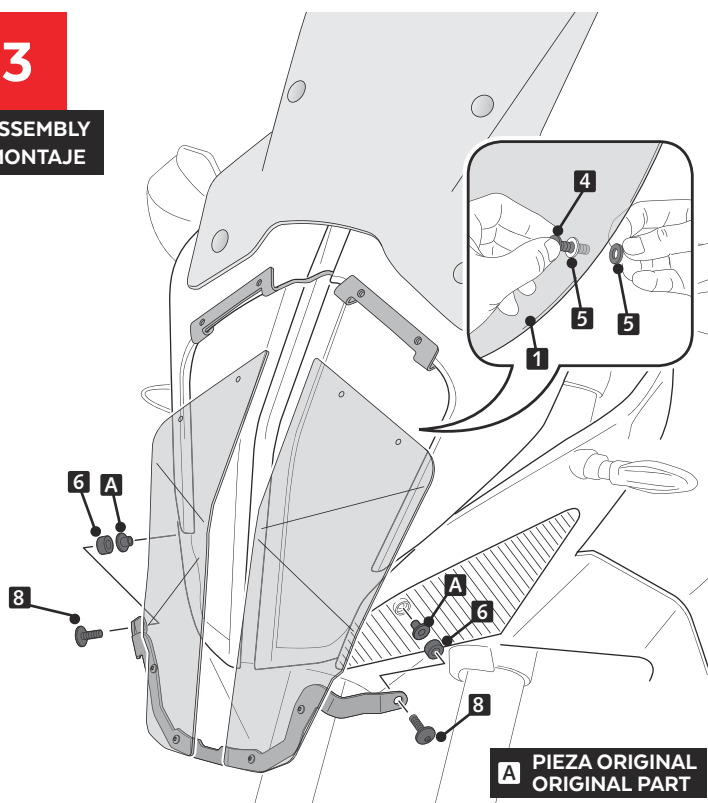

A PIEZA ORIGINAL
ORIGINAL PART

4

ASSEMBLY
MONTAJE

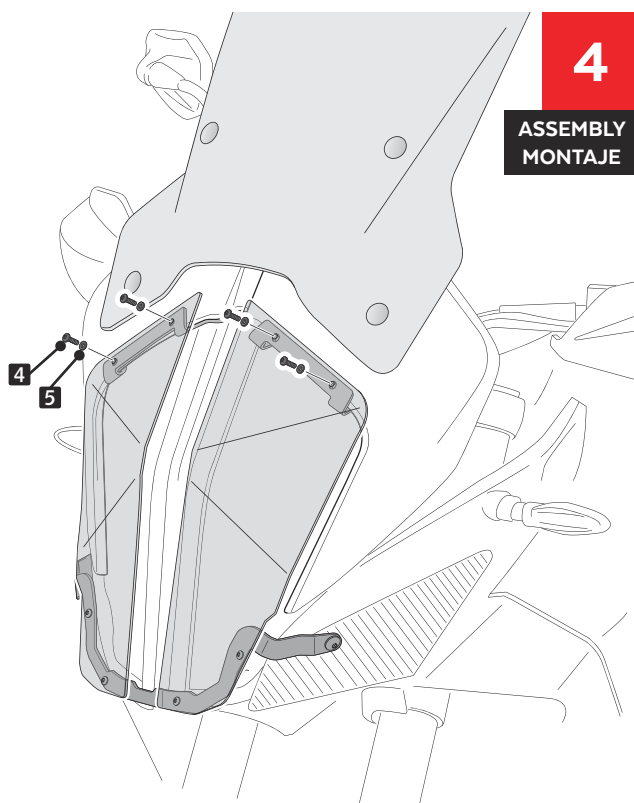

KTM 1290 SUPER ADVENTURE R/S '17-

EXPLOTING

