

# YAMAHA NIKEN GT '23-

## M O U N T I N G I N S T R U C T I O N S

REF 21820

TOURING SCREEN



1 Person



20 min



EASY



ALLEN



Nº 3  
Nº 4


| ID. | PIEZA/PART | DESCRIPCIÓN                       | DESCRIPTION                    | QTY. | REF.:            |
|-----|------------|-----------------------------------|--------------------------------|------|------------------|
| 1   |            | Cúpula Touring                    | Touring screen                 | 1    | 21724H/W/FM3     |
| 2   |            | Soporte Izquierdo ( L )           | Left support ( L )             | 1    | SOPOR2P3-L21820  |
| 3   |            | Soporte derecho ( R )             | Right support( R )             | 1    | SOPOR2P3-R21820  |
| 4   |            | Silentblock M5                    | M5 silentblock                 | 4    | SILENBTM5-046/1  |
| 5   |            | Arandela de nylon M5              | M5 nylon washer                | 4    | ARNV000000000245 |
| 6   |            | Tornillo allen M5x16 Ø11 ISO 7380 | M5x16 Ø11 ISO 7380 Allen screw | 4    | TORNI-I7380-493  |
| 7   |            | Tapón tornillo M5 ISO 7380        | M5 ISO 7380 screw cap          | 4    | TAPON-----85     |
| 8   |            | Tornillo Allen M5x20 Ø11 ISO 7380 | M5x20 Ø11 ISO 7380 allen screw | 4    | TORNI-I7380-730  |

# YAMAHA NIKEN GT '23-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

DISASSEMBLY  
DESMONTAJE

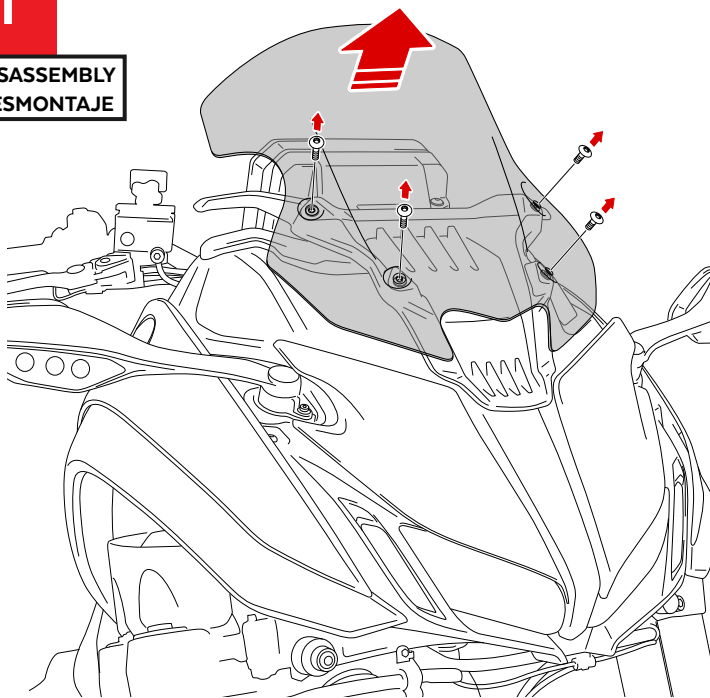


2

ASSEMBLY  
MONTAJE

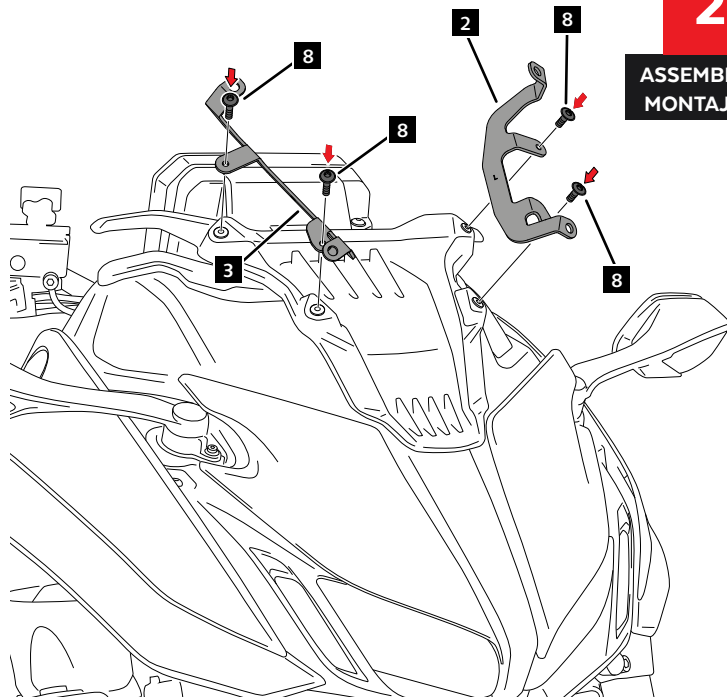


3

ASSEMBLY  
MONTAJE

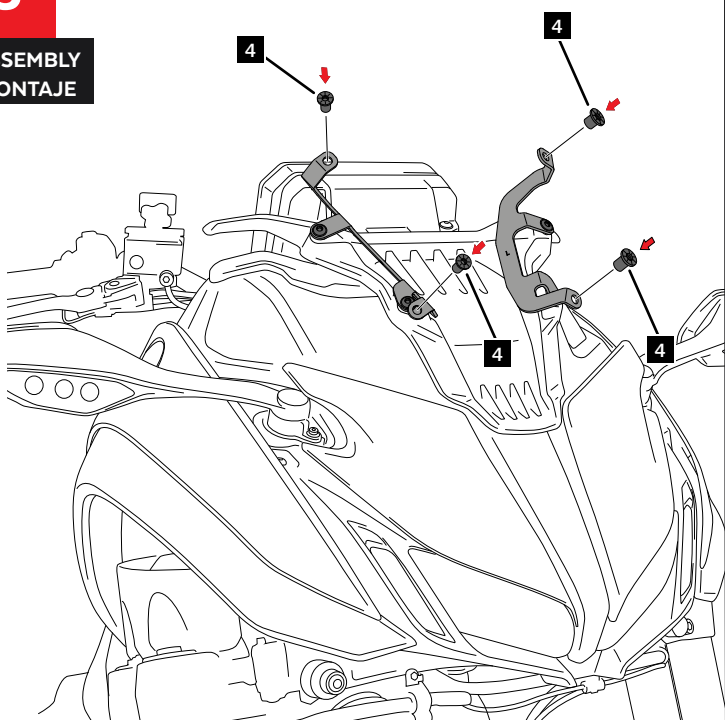

4

ASSEMBLY  
MONTAJE

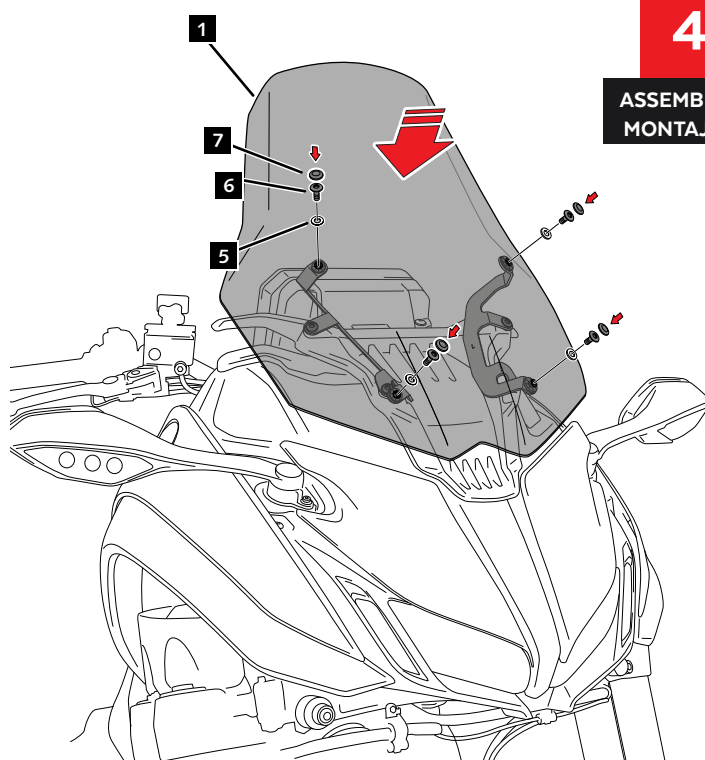

# 2.0 MULTI-ADJUSTABLE VISOR ( FIX )

## M O U N T I N G I N S T R U C T I O N S



REF 20763

UNIVERSAL ( FIXED VERSION )



PHILLIPS  
SCREWDRIVER

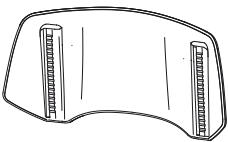


| ID | PIEZA/PART                                                                          | DESCRIPCIÓN                         | DESCRIPTION                     | QTY | REF                  |
|----|-------------------------------------------------------------------------------------|-------------------------------------|---------------------------------|-----|----------------------|
| 1  |  | Visera de policarbonato antirayadas | Antiscratch polycarbonate Visor | 1   | 20765H/WM3           |
| 2  |  | Plantilla                           | Template                        | 1   | PLANTILLA-VISOR      |
| 3  |  | Mecanismo Izquierdo                 | Left Mechanism                  | 1   | See exploding page 2 |
| 4  |  | Mecanismo Derecho                   | Right Mechanism                 | 1   | See exploding page 2 |

# 2.0 MULTI-ADJUSTABLE VISOR ( FIX)

## INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

1

EXPLOTING

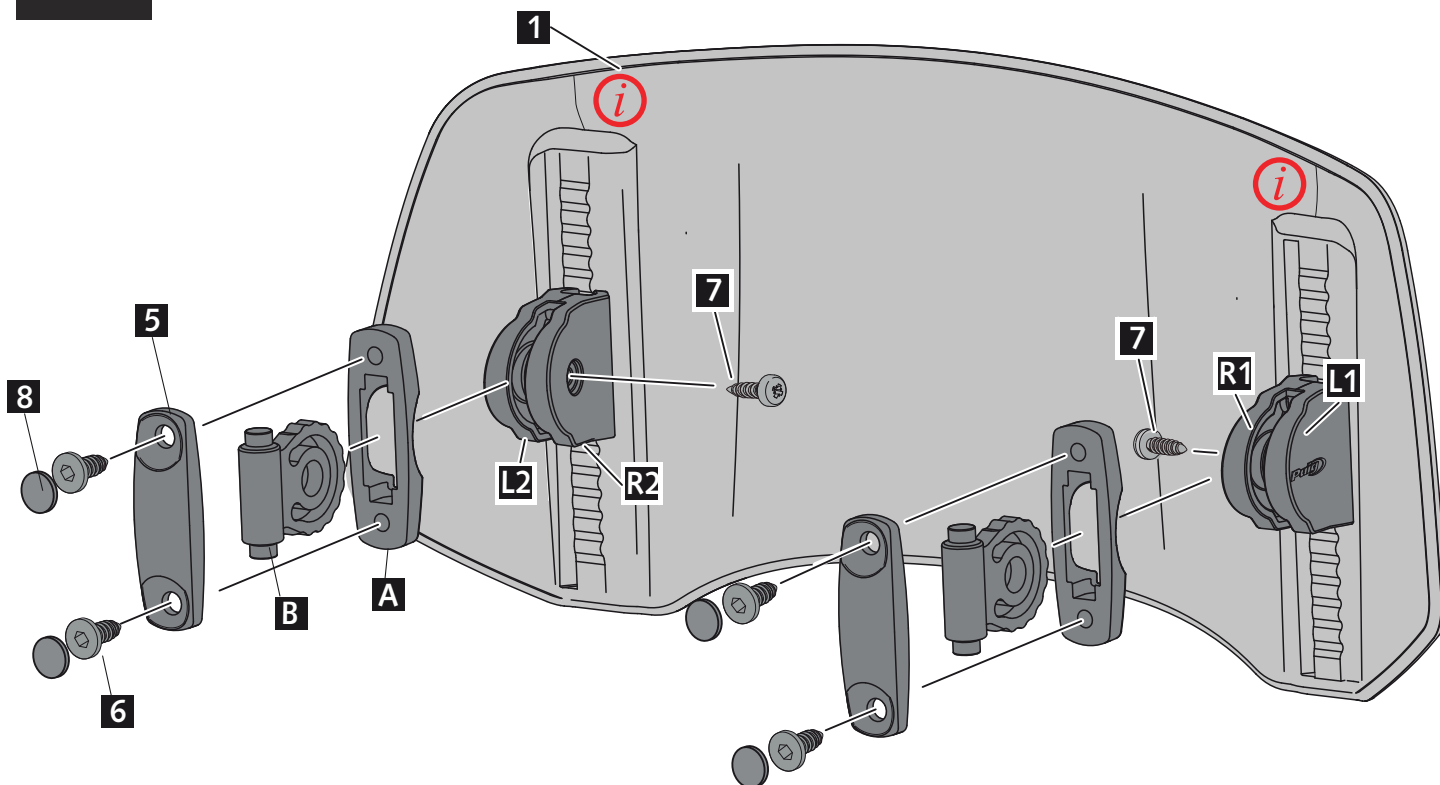

**i** LINEA DE PARTICIÓN DEL MOLDE DE INYECCIÓN.  
PARTING LINE OF THE INJECTION MOLD **i**


| ID | PIEZA/PART                                                                          | DESCRIPCIÓN                          | DESCRIPTION                       | QTY | REF             |
|----|-------------------------------------------------------------------------------------|--------------------------------------|-----------------------------------|-----|-----------------|
| A  |  | Tapa pieza eje                       | Axle part cover                   | 2   | TAPAEJE-VISOR-- |
| B  |  | Pieza eje                            | Axle part                         | 2   | EJE-FIX-VISOR-- |
| L2 |  | Tapa 2 Logo                          | Logo cover 2                      | 1   | TAPALAT-VISORL2 |
| R2 |                                                                                     | Tapa 2 Tornillo                      | Screw cover 2                     | 1   | TAPALAT-VISORR2 |
| L1 |  | Tapa 1 Logo                          | Logo cover 1                      | 1   | TAPALAT-VISORL1 |
| R1 |                                                                                     | Tapa 1 Tornillo                      | Screw cover 1                     | 1   | TAPALAT-VISORR1 |
| 5  |  | Tapa cúpula                          | screen cover                      | 2   | TAPAFIX-VISOR-- |
| 6  |  | Tornillo allen S.T. 6,3 x14          | S.T. 6,3 x14 Allen screw          | 4   | TOZN00M60000258 |
| 7  |  | Tornillo Ø3,5x9,5 DIN7981 C ( negro) | Ø3,5x9.5 DIN7981 C screw ( black) | 2   | TORNI-D7981-907 |
| 8  |  | Tapón tornillo M6                    | M6 Screw cap                      | 4   | TAPON-----81    |

## 2.0 MULTI-ADJUSTABLE VISOR ( FIX)

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

2

ASSEMBLY  
MONTAJE

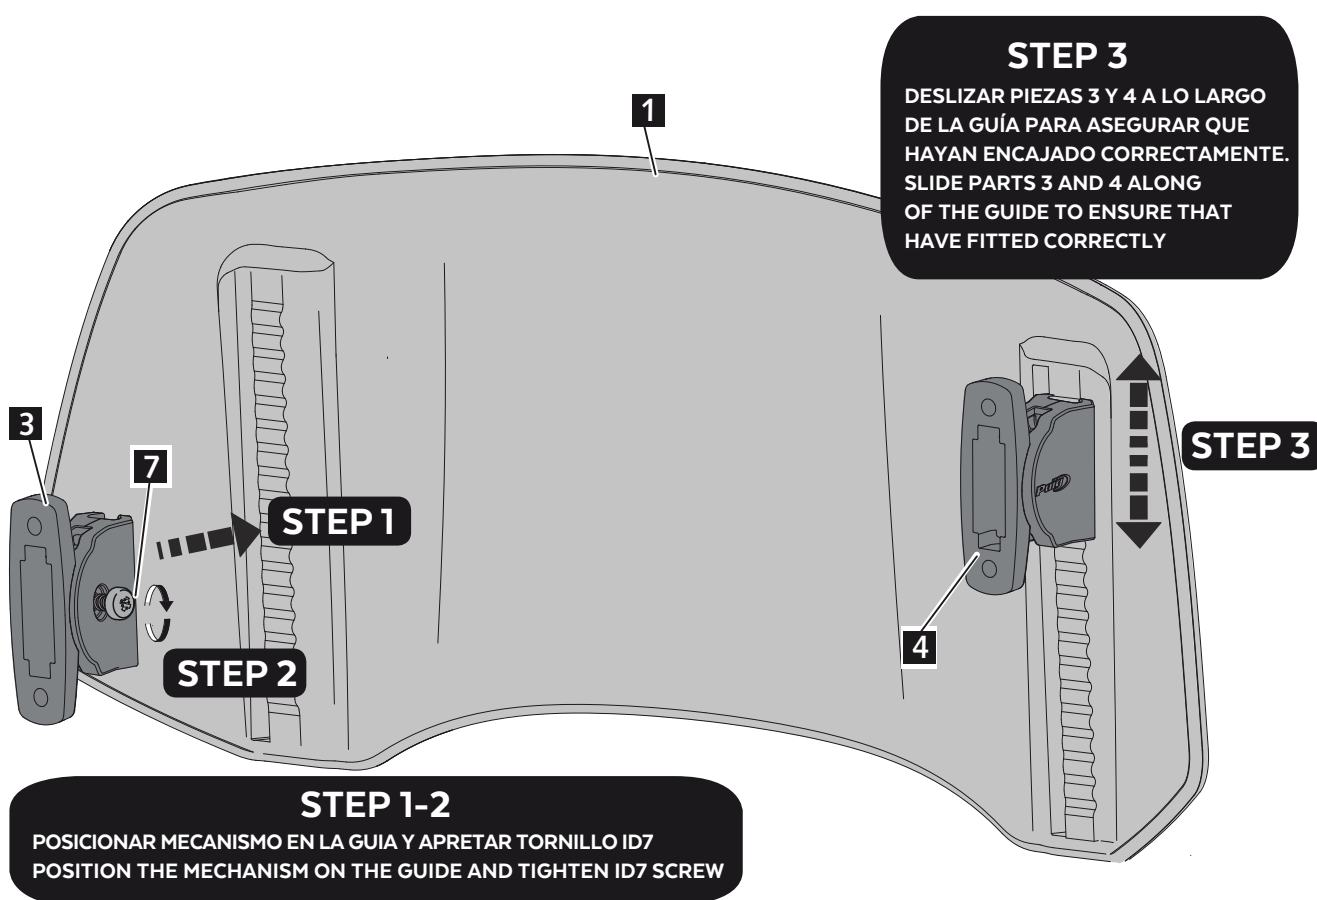

### STEP 1-2

POSICIONAR MECANISMO EN LA GUÍA Y APRETAR TORNILLO ID7  
POSITION THE MECHANISM ON THE GUIDE AND TIGHTEN ID7 SCREW



PAR APRIETE TORNILLO ID7 1 Nm  
TIGHTENING TORQUE FOR ID7 SCREW 1 Nm


## 2.0 MULTI-ADJUSTABLE VISOR (FIX)

### INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

**3**

SCREEN TYPE “ ——— ”


ASSEMBLY  
MONTAJE

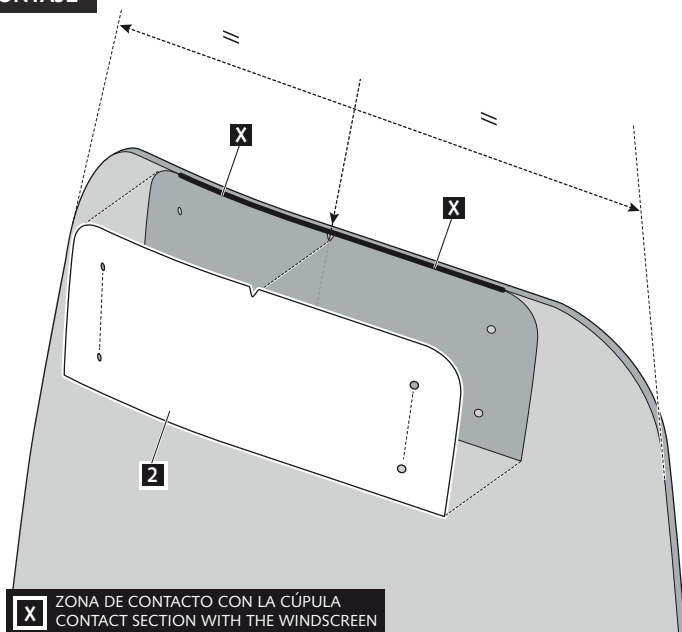

SCREEN TYPE “ ——— ”

**3**


ASSEMBLY  
MONTAJE

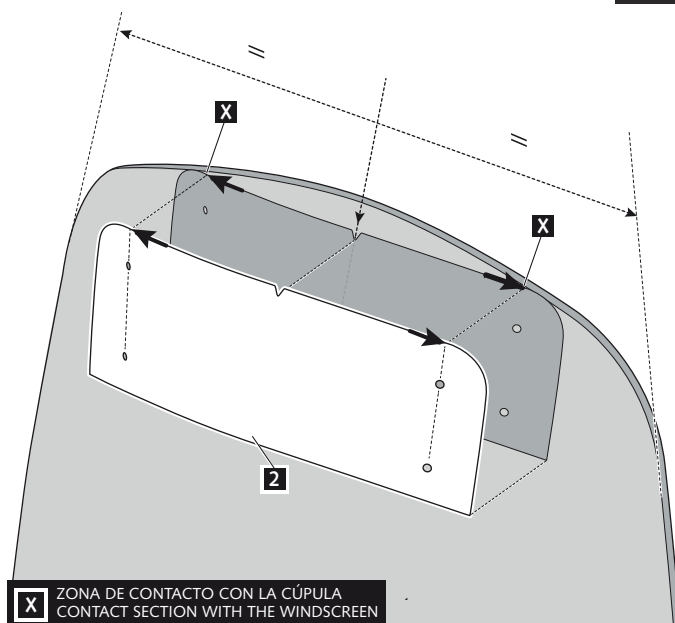

**3**


SCREEN TYPE “ ——— ”

ASSEMBLY  
MONTAJE

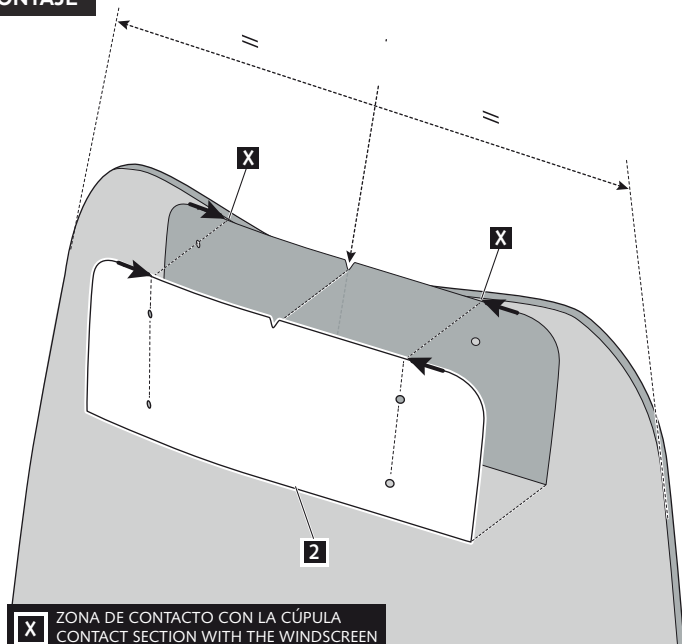

**4**

ASSEMBLY  
MONTAJE

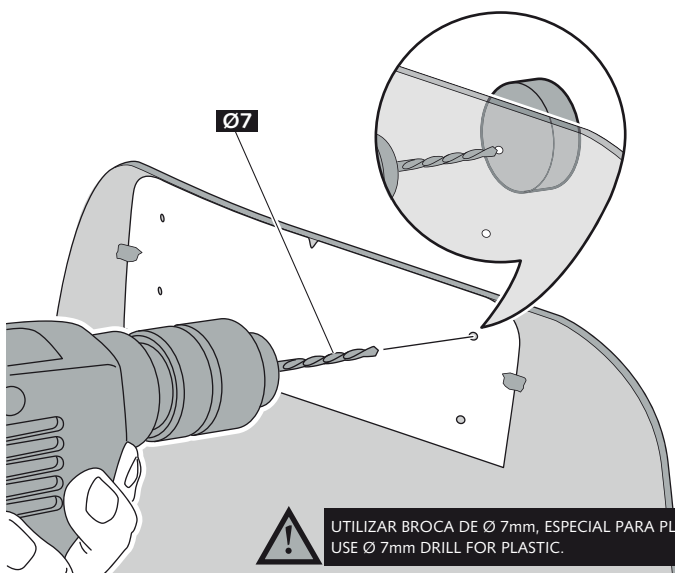


## 2.0 MULTI-ADJUSTABLE VISOR ( FIX)

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

5


ASSEMBLY  
MONTAJE

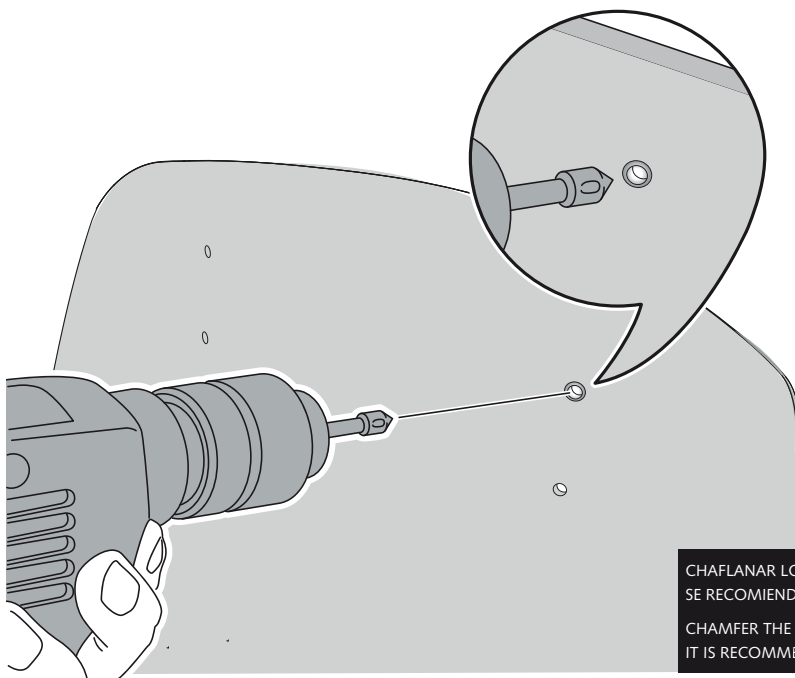

CHAFLANAR LOS 4 AGUJEROS POR AMBOS LADOS.  
SE RECOMIENDA REALIZAR CHAFLAN Ø10mm -Ø20mm  
CHAMFER THE FOUR HOLES ON BOTH SIDES.  
IT IS RECOMMENDED TO MAKE CHAMFER Ø10mm -Ø20mm

6

ASSEMBLY  
MONTAJE

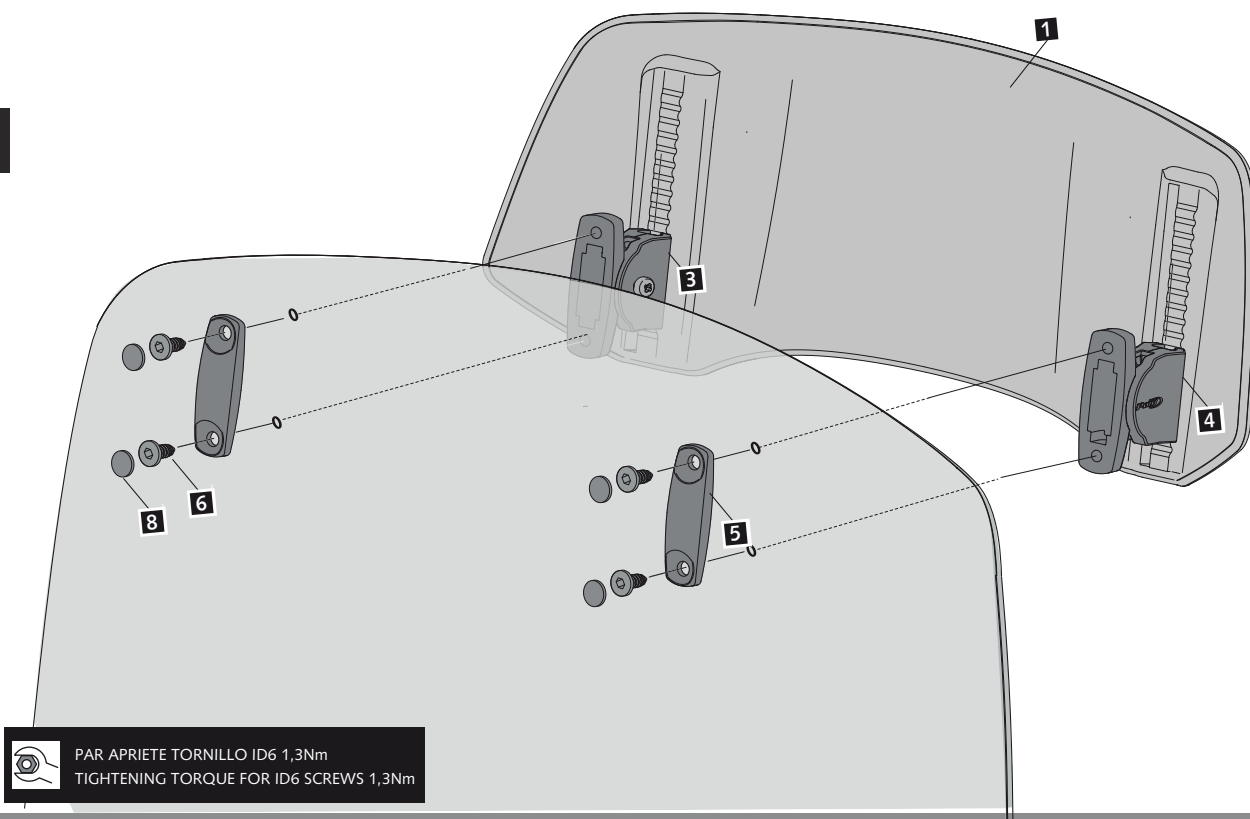

PAR APRIETE TORNILLO ID6 1,3Nm  
TIGHTENING TORQUE FOR ID6 SCREWS 1,3Nm